



STRAIGHTENER OPERATING INSTRUCTIONS

MODELS


SBX, SCX & SD SERIES

(4-02)

INDEX


1. Straightener Layout Sheet SBX	Pg. 3
2. Straightener Layout Sheet SCX	Pg. 4
3. Platen Adjustment Bulletin	Pg. 5
4. Specifications	Pg. 6
5. Installation	Pg. 7
6. Start-Up Procedure	Pg. 8
7. Electrical Controls Layout	Pg. 10
8. Dancer Arm Adjustment Explanation	Pg. 12
9. Standard and Optional Components	Pg. 13
10. Operations	Pg. 14
11. Maintenance	Pg. 15
12. Trouble Shooting Guide	Pg. 16
13. Taut Stock Explanation	Pg. 18
14. Electrical Schematics	Pg. 28
15. Mechanical Parts List SBX	Pg. 33
16. Mechanical Parts List SCX	Pg. 35
17. Typical Stamping Layout	Pg. 41

UNIT	"A"	"B"	"C"	"D"
SBX-4	28.0	20.0	46.5	40.5
SBX-8	28.0	26.0	46.5	40.5
SBX-12	28.0	26.0	46.5	40.5

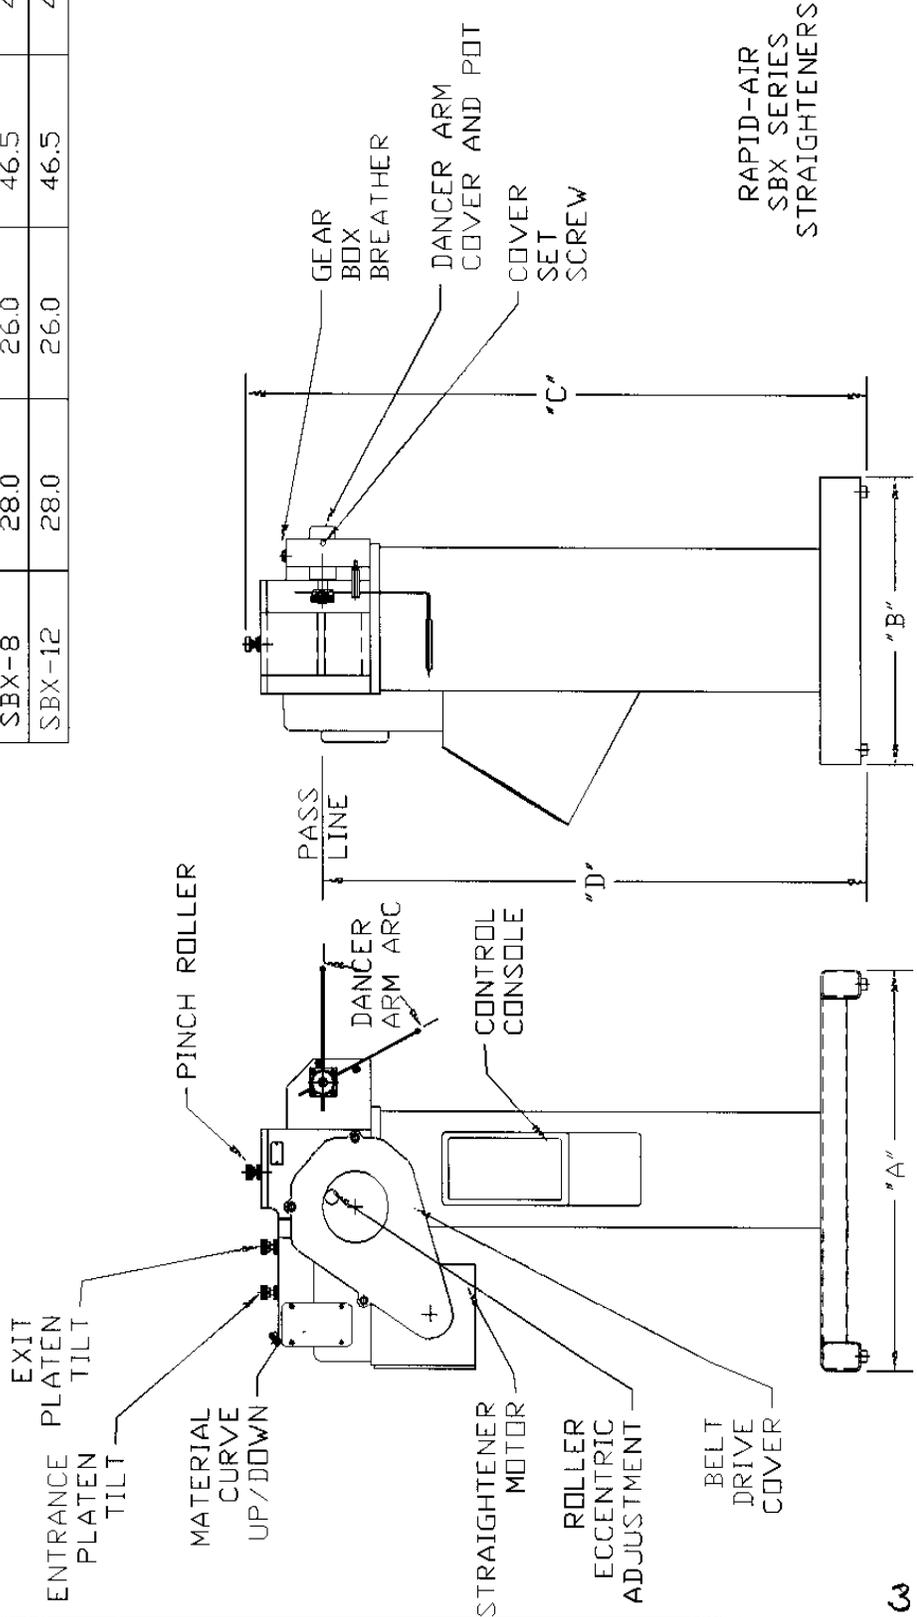


RAPID-AIR
SBX SERIES
STRAIGHTENERS

SCX & SD Series

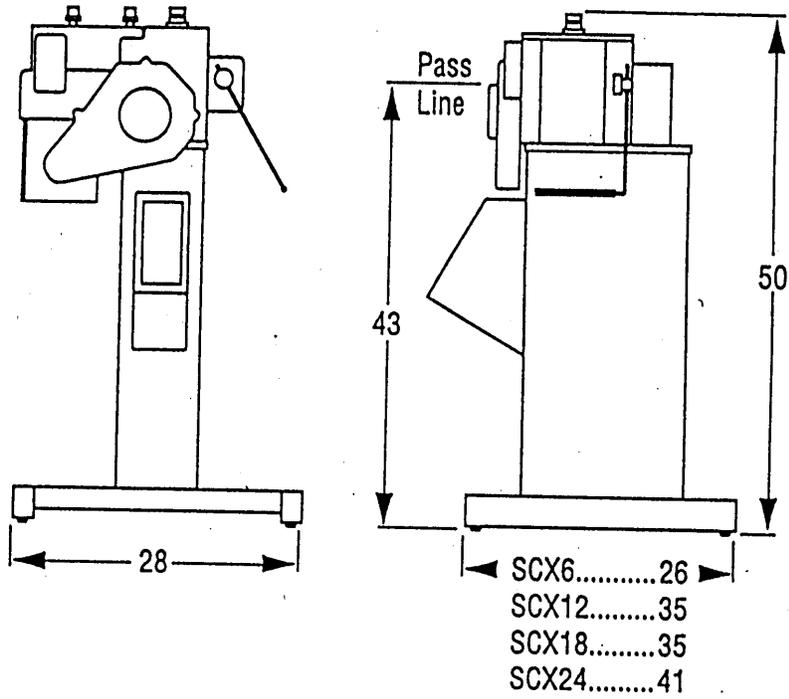


SCX & SD Series with Inclined Head

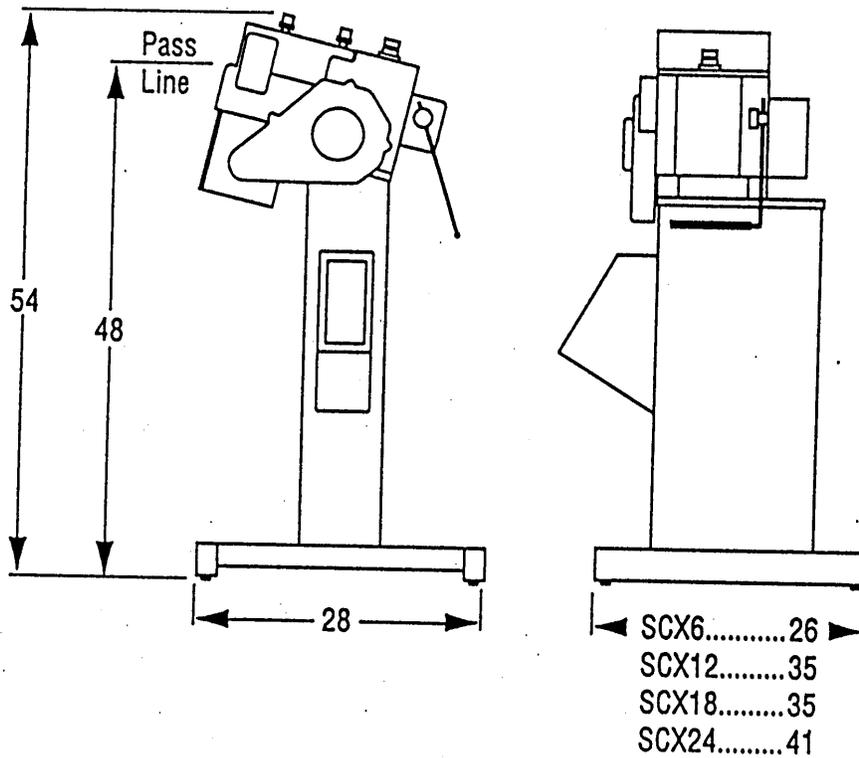


Adjustable Platen Stock Straighteners vs. Straighteners with Traditional Vertical Roll Adjustment

CONCEPT: The concept behind a movable platen containing the upper bank of rolls for straighteners can be somewhat difficult to grasp, but once the principles are understood the superiority of this system becomes obvious. To explain the differences between the adjustable platen system and one that uses traditional single-point vertical roll adjustment, we are describing both types of systems here.

VERTICALLY ADJUSTABLE UPPER ROLLS: For centuries the bending of materials has been done by variations of a three-roll arrangement as illustrated in **Figure 1**.

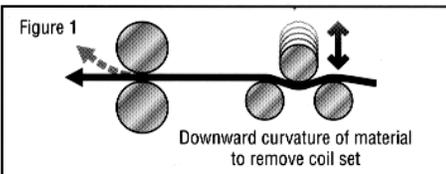


Bending occurs when one roll is forced into the space between the other two rolls for downward curvature of the material to remove coil set. Pressroom straighteners add multiple three-roll combinations in order to level the material in small increments at each stage. This method can provide acceptable results for some materials, but is limited because correction of material curvature is effective in only one direction as illustrated in **Figure 2**.


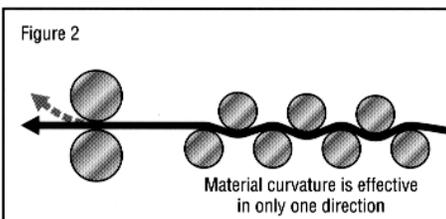


If the straightener is made to correct a clockwise curvature, it is often impossible to correct a counterclockwise curvature. The only available adjustment is the variation of the degree of bend at each station. This is true even for straighteners that have banked upper rolls that pivot for two-point adjustment.



SIX-WAY UPPER ROLL ADJUSTMENT: After manufacturing straighteners with vertically adjustable rolls for many years, RapidAir developed and patented the adjustable platen type straightener as illustrated in **Figure 3**.

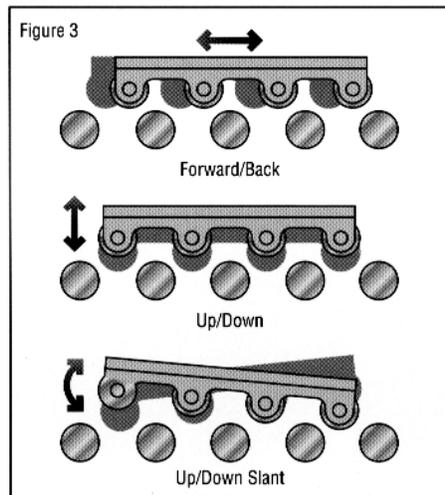


This design mounts the upper rolls in a platen which can be adjusted for *degree of bend* as illustrated in **Figure 4** and **Figure 5**

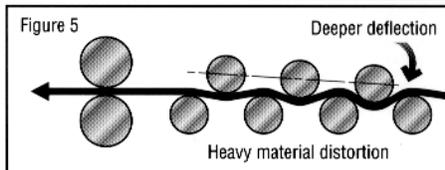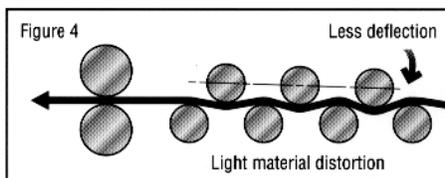

and for *curvature direction* as shown in **Figure 6** and **Figure 7**.

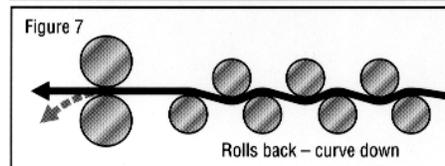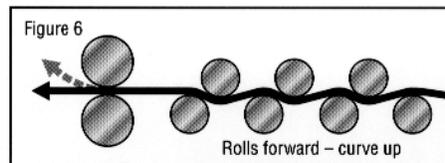

To more easily explain the concept, **Figure 8** shows a three-roll combination with the upper roll forward and **Figure 9** shows a three-roll combination with the upper roll to the rear.

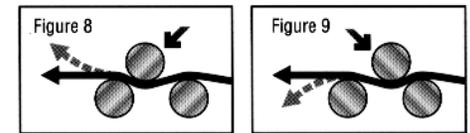


Notice that the sharpest bend occurs where two rolls are in close proximity. When the upper roll is forward, the curvature will be up and when the forward roll is adjusted to the rear, the bend will be down. The degree of bend can be adjusted by a combination of vertical and horizontal adjustments.

ADVANTAGES: The high degree of flexibility afforded by the adjustable platen design provides a predictable straightening method for a wide variety of materials and takes a lot of the "Black Magic" out of pressroom straightener setup. The reduction in the flexing and distortion of the strip of material and the reduction of the straightening power required allows effectiveness with heavy materials. Additionally, the ability to place rolls in a proper close proximity allows effective straightening with very thin materials.

ROLL DIAMETER: The smaller the roll diameter in a straightener the better it is able to remove distortions in the strip of material, but this factor is compromised by the requirement of larger rolls in wider models of straighteners in order to prevent deflection of the rolls themselves. RapidAir straighteners are designed to optimize all factors (including number of rolls, diameter and position) within the published material capacities and specifications for each model.

SWING-OPEN TOP: RapidAir developed and introduced the swing-open top for straighteners in order to facilitate the cleaning of rolls and the threading of a new strip of material through the straightening rolls. For convenience and safety, each top is counter-balanced and held in the open position until it is clamped for operation. Roll adjustment settings are maintained when the top is closed and locked.

AVAILABILITY: All models of RapidAir straighteners are presently available with the adjustable platen design with an expanded range of models being introduced in the coming months.

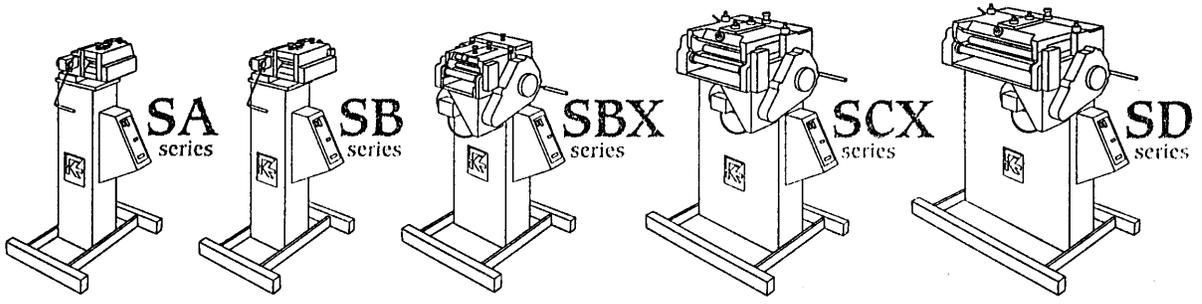

SPECIFICATIONS

Series	Model	Max. Stock Width (In.)	Min.-Max. Effective Straightening Range (In.)	Max. Speed (In./Min.)	Straightening Rolls No., Dia. (In.)	Pinch Rolls (2) Dia. (In.)	Drive Motor (HP)	Input Power (vac/ph)	
SA	Std. Speed SA3	3	.002-.030	700	11, 3/8	1-1/2	1/4	115/1	
	Med. Speed SA3M	3	.002-.030	1400	11, 3/8	1-1/2	1/2	115/1	
SB	Std. Speed SB4	4	.003-.050	700	11, 5/8	1-1/2	1/2	115/1	
	Med. Speed SB4M	4	.003-.050	1400	11, 5/8	1-1/2	1/2	115/1	
SBX	Std. Speed	SBX4	4	.004-.090	825	9, 7/8	1-3/4	3/4	115/1
		SBX8	8	.004-.085	825	9, 7/8	1-3/4	3/4	115/1
		SBX12	12	.004-.075	825	9, 7/8	1-3/4	3/4	115/1
	Med. Speed	SBX4M	4	.004-.090	1650	9, 7/8	1-3/4	1	115/1
		SBX8M	8	.004-.080	1650	9, 7/8	1-3/4	1	115/1
		SBX12M	12	.004-.070	1650	9, 7/8	1-3/4	1	115/1
SCX	Std. Speed	SCX6	6	.006-.100	825	9, 1-3/8	1-3/4	1	115/1
		SCX12	12	.006-.090	825	9, 1-3/8	1-3/4	1	115/1
		SCX18	18	.006-.080	825	9, 1-3/8	1-3/4	1	115/1
		SCX24	24	.006-.065	825	9, 1-3/8	1-3/4	1	115/1
	Med. Speed	SCX6M	6	.006-.100	1650	9, 1-3/8	1-3/4	2	230/1
		SCX12M	12	.006-.090	1650	9, 1-3/8	1-3/4	2	230/1
		SCX18M	18	.006-.080	1650	9, 1-3/8	1-3/4	2	230/1
		SCX24M	24	.006-.065	1650	9, 1-3/8	1-3/4	2	230/1
	High Speed	SCX6H	6	.006-.080	4100	9, 1-3/8	1-3/4	3	230/1
		SCX12H	12	.006-.070	4100	9, 1-3/8	1-3/4	3	230/1
		SCX18H	18	.006-.060	4100	9, 1-3/8	1-3/4	3	230/1
		SCX24H	24	.006-.055	4100	9, 1-3/8	1-3/4	3	230/1
SD	Std. Speed	SD6	6	.006-.125	825	9, 1-3/8	1-3/4	2	230/1
		SD12	12	.006-.125	825	9, 1-3/8	1-3/4	2	230/1
		SD18	18	.006-.100	825	9, 1-3/8	1-3/4	2	230/1
		SD24	24	.006-.090	825	9, 1-3/8	1-3/4	2	230/1
SC	Std. Speed SC4	4	.015-.085	825	9, 1-1/4	1-1/4	1	115/1	

A right-to-left material flow direction is standard for above models — left-to-right optional at no additional cost.



Model SC4

Model SC4 Straightener with individually adjustable upper rolls. This 4" x .085" capacity straightener with its counterbalanced swing-open top is a Rapid-Air original and continues to be available due to customer acceptance and demand. Dial-type indicators for roll settings are optional.

A NOTE ON ROLL DIAMETER AND QUANTITY:
The smaller the roll diameter in a straightener the better it is able to remove distortions in the strip of material. Rapid-Air straighteners are designed to optimize all factors (including number of rolls, diameter and position) within the published material capacities and specifications for each model.

SBX SERIES POWERED STRAIGHTNER

INSTALLATION

The straightener that you just received is fully assembled and tested and ready to be put into position. **CAUTION:** Due to shipment vibration, the straightener should be checked to be sure that all screws and bolts are secure and all electrical components are in place inside the cabinet. Visually inspect the complete machine for physical damage due to shipment and handling. If the straightener was damaged in shipment, contact the carrier first and then Rapid Air.

Install the straightener on a level surface with sufficient clearance for loading the material and adjusting the roller pressure for straightening. Align and center the straightener to the device that it will be supplying the straightened stock. The straightener should then be bolted to the floor especially when used to pull stock from a non-powered reel.

CAUTION: Before bolting the straightener down, check for the longest feed length to be run. The straightener should be set so that there will be about two or three feed lengths in storage in the loop without re-inducing coil set in the material.

The standard speed straightener is completely self contained and only needs to be plugged into a 20 amp, 120 VAC, 60 HZ outlet. If an extension cord is used as a source to the straightener power, it should be a minimum 12 gauge wire to keep the voltage losses down and also for electrical safety reasons.

Please check your local safety codes.

The medium and high speed straighteners require 230 VAC, 60 HZ, 1PH as the supply voltage. Please refer to the schematics in the manual for required fuse sizes.

Please check your local safety codes.

Turn on the main power button and run a test cycle checking the jog (using the jog button) and run (using the dancer arm to test that the speed varies if using the proportional control). Test all electrical features before continuing.

START UP PROCEDURE

Prior to applying power to the straightener, all the controls on the machine should be reviewed. A brief summary is listed on the next page.

MAIN CONSOLE AND CONTROLLER

The main control console with controls is mounted on the cabinet of the straightener. Located on the face of the console are five switches, one potentiometer, one push-button and one or two circuit breaker reset switches, which are explained below.

1. ON/OFF SWITCH

This illuminated switch is the main power switch for the controller. On the 120 VAC straighteners, it will be a toggle switch and on the 230 VAC version it will be a mushroom push-button. It must be “ON” for the straightener to function.

2. RESET BUTTONS (circuit breaker)

120 VAC.

- A. 15 amp—This is the main circuit breaker for the straightener.
- B. 3 amp—This is the main circuit breaker for the “D-SUB” (25 pin) connector. Any shorting or overloads would trip this breaker.

240 VAC.

- A. 3 amp—This is the main circuit breaker for the “D-SUB” connector. Any shorting or overloads would trip this breaker.

3. RUN/STOP/JOG SELECTOR SWITCH

- A. If “**RUN**” was selected and the dancer control arm was raised, the straightener rolls would rotate.

If “**STOP**” was selected then none of the functions would work.

If “**JOG**” was selected then the jog button has to be depressed to have the straightener rolls rotate.

4. JOG BUTTON

Used for intermittent movement of the straightener rolls and mainly for setup. The jog speed can be adjusted by rotating the **R3** potentiometer on the 69100079 board in the control sub-panel.

5. % SPEED POTENTIOMETER

The % speed potentiometer adjusts the maximum speed that the straightener rolls can rotate regardless of the dancer arm height. It should be set to maintain a constant material feed rate through the straightener.

6. DANCER ARM LOOP HEIGHT AND RANGE ADJUSTMENT

A. Loop Range—The loop range switch adjusts the amount of travel that the dancer arm will move to provide the full range of speed on the straightener. It has three positions with a “0” as the least travel from slowest to fastest speed and a “2” has the most movement between slowest to fastest speed.

B. Loop Height—The loop height switch is used for setting the start position of the control arm. It has three positions with the “0” setting having the start position at the dancer arm rest position and the “2” having the start position somewhat higher than the dancer arm rest position. This setting will determine the dancer arm angle that the reel will start turning. This function is used to accommodate different thickness of material which would have a different bend radius thus requiring the dancer arm to be at a height somewhat above the home position when at rest.

7. LOOP ARM / EXTERNAL SWITCH

This switch is used to select whether the material loop is controlled by the dancer arm or an external loop control. If **LOOP ARM** is selected then the control will monitor the dancer arm movement. If **EXTERNAL** is selected then the control will monitor whatever is plugged into the “**D-SUB**” (25 pin) connector.

8. REMOTE INTERFACE PORT “D” CONNECTOR

This 25 pin connector, located on the lower portion of the console is used to communicate with external loop equipment. The RSB, RTB, & RTA will plug into the port and can immediately be implemented.

CAUTION: NEVER PLUG ANY TYPE OF COMPUTER OR NON RAPID-AIR EQUIPMENT INTO THIS PLUG OR SEVERE DAMAGE COULD RESULT. ALWAYS CONSULT THE FACTORY WHEN INSTALLING DIFFERENT EXTERNAL CONTROLS FOR ADVICE ON COMPATIBILITY AND WIRING INFORMATION.


9. PANEL MOUNTED ELECTRICAL COMPONENT DESCRIPTION

69100034 board—proportional control board


69100076 board—component interface board

69100014 board—(RAMM) D.C. motor control board [120 VAC, 1 PH]


69100038 board—(RAMM) D.C. motor control board [240 VAC, 1 PH]

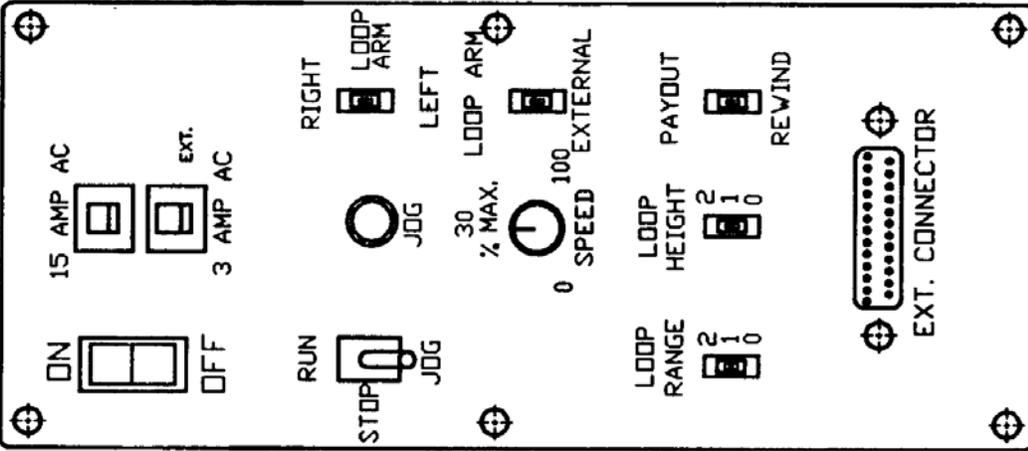

FRONT VIEW



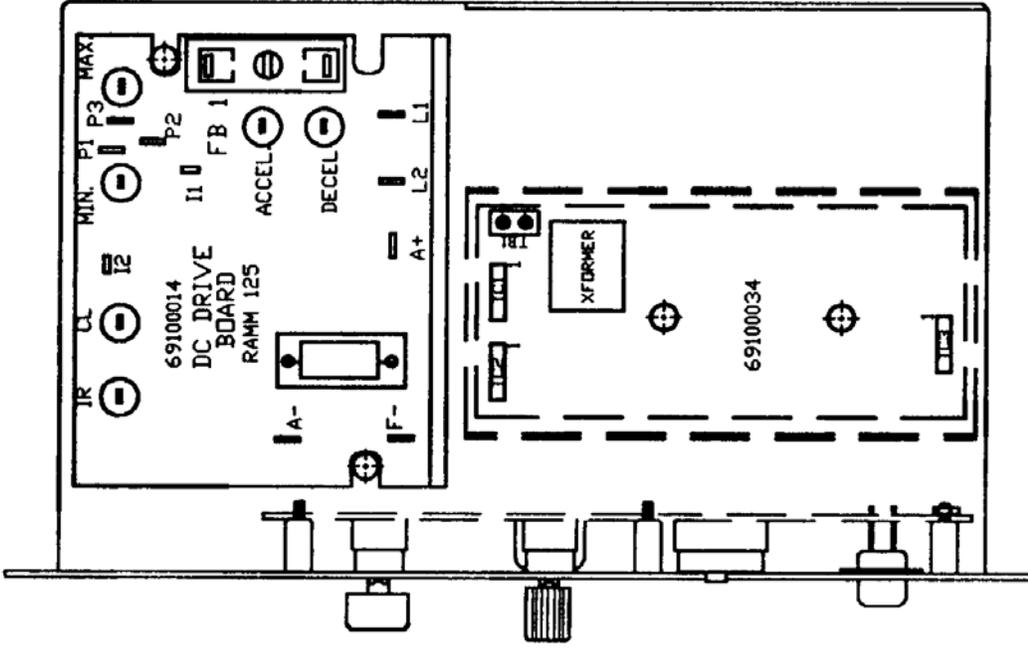


SIDE VIEW

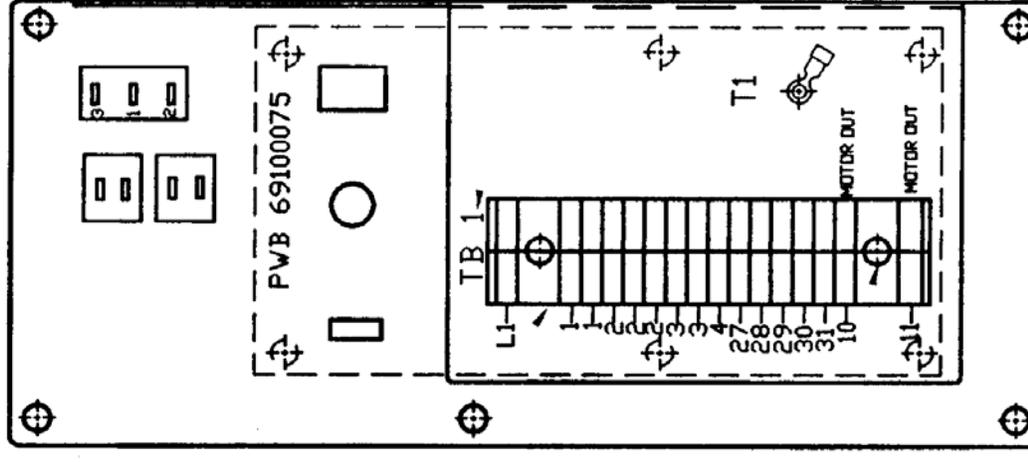


BACK VIEW

1 HP AND LOWER CONTROL

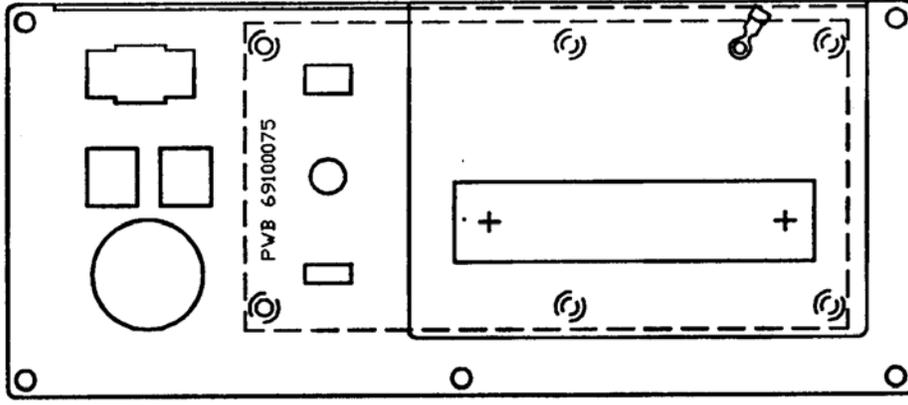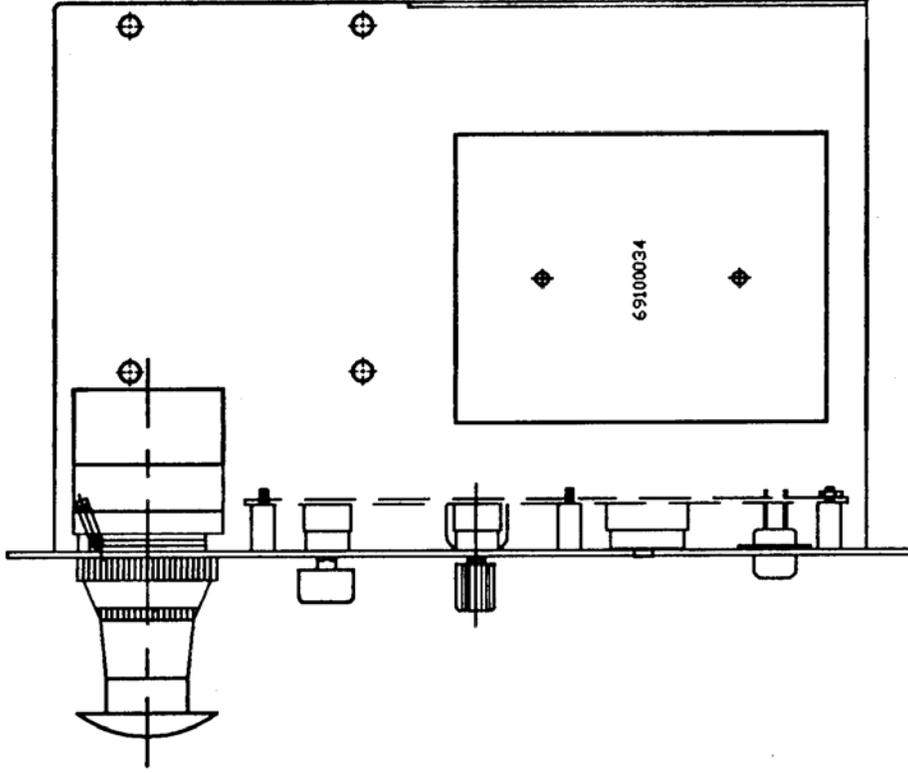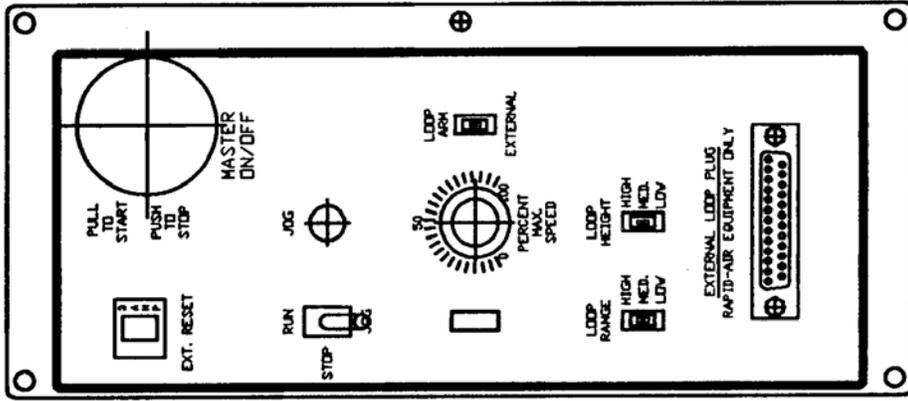

2 & 3 HP CONTROL

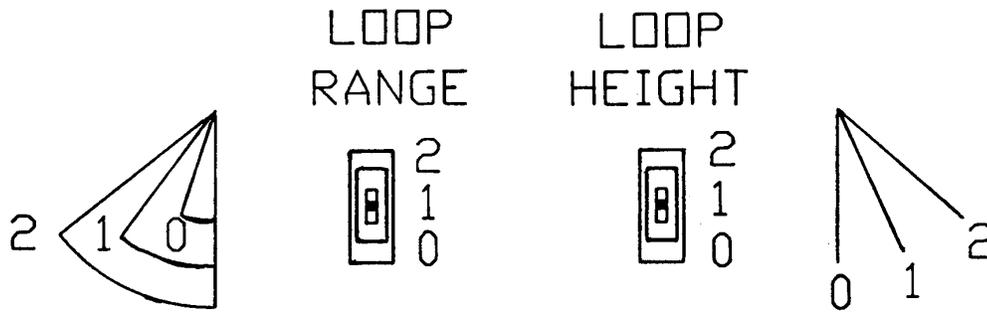


DANCER ARM LOOP HEIGHT ADJUSTMENT

Three different loop sensing arm operating positions are selected manually during set-up. By selecting the higher number, the zero point of the dancer arm is raised from its rest position to the angle shown (as indicated 0-2). The dancer arm will move from rest position to the angle selected before the pallet reel begins to rotate.


DANCER ARM LOOP RANGE FUNCTION



30 degree—Loop sensing arm travels through a full 30 degree arc to vary turntable rotation speed from slow to full speed as controlled by % speed pot.

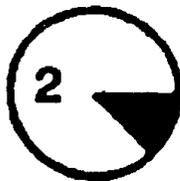

20 degree—Loop sensing arm travel through a 20 degree arc to vary turntable speed from slow to full speed as controlled by % speed pot.

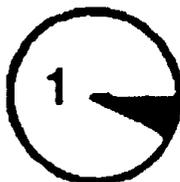

10 degree— Loop sensing arm travels through a 10 degree arc to vary turntable rotation speed from slow to full speed as controlled by % speed pot.

STANDARD STRAIGHTENER COMPONENTS

CURVE UP/DOWN ADJUSTMENT

Some applications have dies that cannot accept anything but flat stock and other dies run better with the material curving up or down to miss the built in edge required in the die. Before this feature was added, operators would under straighten or over straighten the material to suit their needs but in doing so would severely change the material entering the die. This not only caused feeding problems but part quality problems. With this feature, curve up or down can be accomplished by changing the position of the rolls without stressing the material.

ENTRANCE GUIDE ROLL BLOCK

All straighteners are shipped with an entrance guide roll. This contains a roller and two adjustable edge guides.

OPTIONAL STRAIGHTENER COMPONENTS

ENTRANCE CASCADE ROLL

The entrance cascade roll assembly is used to maintain a support arc for stock entering a feed. The cascade roll has three extra rollers to help the material flow better.

EXIT CASCADE ROLL

The straightener is shipped with the exit side pre-drilled for the cascade roll or guide roll block. The entrance and exit use the same components.

ANGLE BRACKET

Rapid Air offers this accessory that mounts between the straightener head and the base. It angles the exit side of the straightener twelve degrees lower than the entrance side. This feature works very well when using the straightener to pull off a non powered reel.

OPERATION

Once the straightener has been tested and all the functions work then it should be tested for what it was designed to do and that is to remove coil set.

Retract all of the idler rolls and the exit pinch roll to a position so when the cover is closed the material is not being deformed. Open the cover of the straightener and position the edge guides for maximum width. Cut and place about a four foot length of the material onto the straightener rolls with the exit end of the material extending through the exit pinch rolls and centered from side to side in the straightener. Close the cover and latch it. Adjust the exit pinch roll enough to grip and hold the material. Adjust the edge guides so that they just touch the material.

Adjust the first idler roll knob, this is the one nearest the entrance of the straightener, so that it deforms the material no more than the thickness of the material. Adjust the second idler roll knob so it is lightly on the roll. Run the material to check that the exit pinch roll is not slipping on the material, readjust if necessary. This piece will still have coil set in the first two feet of the material as it was not run through the complete straightening cycle. At this time, this piece could be rerun and checked for straightness or a new piece could be cut and run and then be checked.

A good check is to guide the exiting material, keeping it parallel to the rolls, until the run is complete and then hold one end of the material in the air while peering down the length of the material. If the material still has "coil set" then readjust roll pressure on the last roll, towards the exit end but before the pinch roll, until the material is straight. Run one or more short length setups while making final adjustments. Once the proper setting has been determined, the quick release top maintains the adjustment during loading.

Thread the material from the reel through the straightener, under the dancer arm, and into the pulling device leaving ample loop between the straightener and the pulling device. If the material thickness is such that when exiting the straightener, it will not let the dancer arm down to the rest position, then either lengthen the dancer arm or adjust the loop height until the straightener stops feeding.

Set the % speed potentiometer to 50% for a starting position and start the pulling device to have the material feeding. If the straightener gets finished and stops before material is needed again then the straightener is set to feed too fast, slow it down by adjusting the % speed potentiometer. The ideal straightening is to have the straightener slightly exceed the feed rate required. This minimizes the starting and stopping and resultant stock deformation.

MAINTENANCE

LUBRICATION

Gear transmission:

The reservoir oil capacity is about 4 OZ. The reservoir oil should be changed every 2000 hours and should be filled the oil level site gauge. Use MOBILE 600W cylinder oil or equivalent. This is a non synthetic oil.

Rolls:

Although the rolls should be cleaned periodically they never have to be greased as all the rolls have permanently lubricated bearings.

Drive Belt:

At the oil change interval, check for belt tension and wear.

TROUBLESHOOTING GUIDE

MAIN SWITCH ON BUT NOT LIT

1. CB tripped
 - a. Reset CB
2. Unit not plugged into main power.
 - a. Plug into main power source
3. No power in incoming line.
 - a. Check outlet.
 - b. Check power cord.
4. Loose wiring
 - a. Check terminals and connections

MOTOR CREEPS IN STOP POSITION

1. R1 & R3 pot on 69100034 board not correctly adjusted.
 - a. Readjust pots so tables stops. Call factory.

UNIT TURNS BUT WON'T JOG

1. Selector switch not in jog position.
 - a. Select jog.
2. Jog pot on 69100076 board not adjusted correctly.
 - a. Adjust pot. Call factory
3. Maximum speed pot on Ramm board set too low.
 - a. Adjust pot.

UNIT ON BUT MOTOR WON'T RUN. (ARMATURE VOLTAGE PRESENT—ON RAMM BOARD)

1. Check motor wiring and fuse.
 - a. Replace motor cord and correct motor wiring. Call factory.
2. Check motor
 - a. Worn brushed or motor defective. Call factory.

NOTE: Refer to drawing RA-2 for location of components, sequence check from Ramm board to motor.

UNIT ON BUT MOTOR WON'T RUN. (NO ARMATURE VOLTAGE ON RAMM BOARD)

1. Selector switch not in run position.
 - a. Turn selector switch to run position
2. If running with dancer arm control.
 - a. Check that the external/loop arm switch is in the loop arm position.

3. If running with external control
 - a. Check that the external/loop arm switch is in the external position.
4. Height switch setting too high.
 - a. Set height setting to “0”.
5. Percent speed pot set too low.
 - a. Adjust percent speed pot to 100%.
6. Fuses blown.
 - a. Check fuses & circuit breaker.
7. No AC voltage at DC drive board.
 - a. Check wiring
8. Check signal voltage between P2 to I2 on DC drive.
0-6 VDC—Ramm
0-9 VDC—Regen Drive
while moving dancer arm
 - a. If there is a signal, check continuity between I1 & I2
 - b. If no continuity, replace D.C. drive or call factory.
9. Check line voltage input of 69100034 board, 120 VAC, TB-1.
 - a. Check wiring. Call factory
10. Check pico fuse 69100034 board (f1).
 - a. Replace fuse, 1 amp pico fuse—call factory.
11. Check for 0-12 VDC between pin #1 (=V) and pin #2 (GND) of panduit connector TC3 on board #69100034.
 - a. If no voltage present call factory.
12. Check for DC voltage between pin #6 (VO) and pin #2 (GND) of panduit connector TC3, on board 69100034, while moving the dancer arm from minimum to maximum position.
 - a. If voltage is present, turn power off and check the ribbon cable connections between panduit connector #TC3 of 69100034 board and panduit connector #TB-4 of 69100076 board. This should be a continuity check for tight connections. Call factory for assistance.
 - b. If voltage is not present move on to step 13.
13. Check voltage between pin #5 of TB-6 & pin #3 of TB-5 on 69100076 board while moving the dancer arm from minimum to maximum position.
 - a. If voltage varies 2.5-4 volt from minimum to maximum position, the dancer arm pot is OK, but the 69100076 board could be defective. Call factory.
 - b. If voltage does not vary when moving the dancer arm from minimum to maximum position—call the factory for assistance.

69100034 TAUT STOCK OUTPUT

The 69100034—Proportional control board has a taut stock output. The output must be wired to a solid state relay as the max current draw is 20 MA. The solid state relay's contact can then be incorporated into the electrical control circuitry.

The output can be wired so that the relay is either on or off with the dancer arm down. When the dancer arm reaches the set point for taut stock, the relay switches state.

The taut stock height set point is set by raising the dancer arm to a position that the material is taut and then adjusting pot R7 so the output changes state. Lower and raise the dancer arm a few times to check that the set point repeats and then the set point repeats and then the task is finished.


The potentiometer that is located just below the taut stock terminal strip is used for presetting the max voltage output requirement for a particular drive. A Ramm DC drive needs 6 VDC for max motor speed so turn the pot fully counter clockwise. A minarik drive board needs 10 VDC for max motor speed so turn the pot fully clockwise.

The following is a brief wiring diagram for the taut stock.

3	GRD
2	10 VDC out with dancer arm down
1	0 VDC out with dancer arm down

AC INPUT 69100034 BOARD

PICCO FUSE .5 AMP

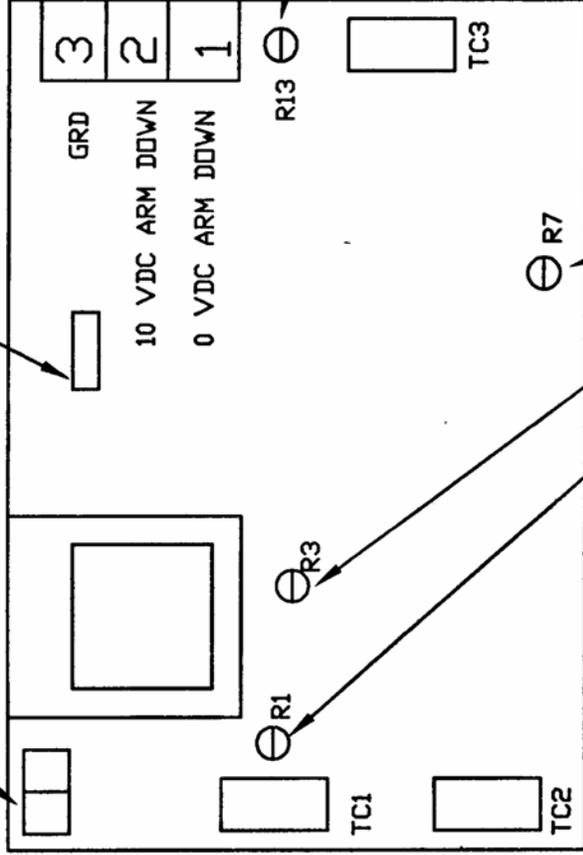

TAUT STOCK OUTPUT

0-10 VDC DUPUT
ADJUSTMENT POT.

TAUT STOCK ADJUSTMENT

DANCER ARM POT. ADJUSTMENT <ZEROING>

DANCER ARM POT. ADJUSTMENT <ZEROING>

TAUT STOCK BOARD

RAPID-AIR CORPORATION

RAMM SOLID STATE DC MOTOR SPEED CONTROL

SAFETY WARNING—PLEASE READ CAREFULLY

This product should be installed and serviced by a qualified technician, electrician or electrical maintenance personnel familiar with its operations and the hazards involved. Proper installation (see instruction information which accompanies product), which includes wiring, mounting in proper enclosure, fusing or other overcurrent protection and grounding, can reduce the chance of electrical shocks, fires or explosion in this product or products used with this product, such as electric motors, switches, coils solenoids and/or relays. Eye protection must be worn when working with control under power. This product is constructed of materials (plastics, metals, carbon, silicon, etc.) which may be a potential hazard. Individual material safety data sheets (MSDS) are available upon request. Proper shielding, grounding and filtering of this product can reduce the emission of radio frequency interference (RFI) which may adversely affect sensitive electronic equipment. If information is required on this product, contact our factory. It is responsibility of the ultimate user of this product to read and comply with this safety warning. (SW effective 1/89).

IMPORTANT

YOU MUST READ THESE INSTRUCTIONS BEFORE OPERATING CONTROL.

1. Be sure AC line voltage corresponds to control voltage.
2. Install the correct Plug-In Horsepower Resistor according to armature voltage and motor horsepower.
3. Recheck connections: AC line to L1 and L2; armature to A+ and A- and field (Shunt motors only to F+ and F-.) (Note: If motor runs in improper direction, interchange armature leads).
4. Install proper AC line fuse and armature fuse as required.
5. Nominal trimpot settings are as follows (expressed in % of full CW rotation):

TABLE 1: NOMINAL TRIMPOT SETTINGS

MIN (minimum speed): 15%	CL (current limit/torque): 65%
MAX (maximum speed): 65%	ACCEL (acceleration start): 20%
IR (IR compensation): 25%	DECEL (deceleration stop): 20%

PLUG IN HORSEPOWER RESISTOR

A Plug-In Horsepower Resistor must be installed to match the RAMM to the motor horsepower and voltage. See table 2 for the correct value. Plug-In Horsepower Resistors are stocked by your distributor.

TABLE 2. PLUG IN HORSEPOWER RESISTOR CHART*

MOTOR HORSEPOWER RANGE**		Plug-in Horsepower Resistor Resistance Value (ohms)	Rapid-Air Part Number
Armature Voltage 90-130 VDC	Armature Voltage 180 VDC		
1/4	1/2	.05	69100529
1/2	1	.025	69100530
3/4	1-1/2	.015	69100534
1***	2***	.01	69100531

*Motor horsepower and armature voltage must be specified when ordering so that proper resistor will be supplied.

** For overlapping motor horsepower range use lower value Plug-In Horsepower Resistor.

*** Auxiliary heat sink must be used to achieve HP rating.

INTRODUCTION

The **RAMM** Full Wave Solid State DC Motor Speed Control represents the latest state of the art design achievable through modern technology.

Features include:

Integrated Circuitry

Used to control and amplify command and reference levels with both closed and open loop feedback to provide superior motor regulation. (Speed changes due to load, line voltage, or temperature variations are held to minimum levels.)

High Quality Components

Selected and tested for proven dependability.

Transient Protection

Used to prevent failure of the power bridge circuit caused by voltage spikes on the AC line.

High Reliability

When used in accordance with the instructions in this manual, the RAMM will provide years of trouble free operation.

A. Initial Setup and Wiring

i. General Instructions

1. Install proper size Plug In Horsepower Resistor.
(see table 2)
2. The **RAMM** can be connected to a standard 120V or 240V 50/60 Hz AC line (be sure the AC input voltage corresponds to the control voltage rating and the motor rating (e.g. 90-130 VDC motor on 120 VAC and 180 VDC motor on 240 VAC).
3. Follow the recommended supply wire sizes as per table 3.
4. Follow the NEC and other electrical codes that apply.

CAUTION: SEPARATE BRANCH PROTECTION MUST BE PROVIDED ON 240V CIRCUITS.

5. Connect control in accordance to connection diagram.

TABLE 3. MINIMUM SUPPLY WIRE SIZE REQUIREMENTS

MAX. MOTOR AMPS (DC AMPS)	MAX. MOTOR HP 90V	MAX. MOTOR HP 180V	MINIMUM WIRE SIZE (AWG) Cu only	
			MAX. MOTOR RUN	MAX. MOTOR RUN
6.0	1/2	1	16	14
12.0	1	2	14	12*
16.0	1 1/2	3	12	12

*Maximum recommended wire size

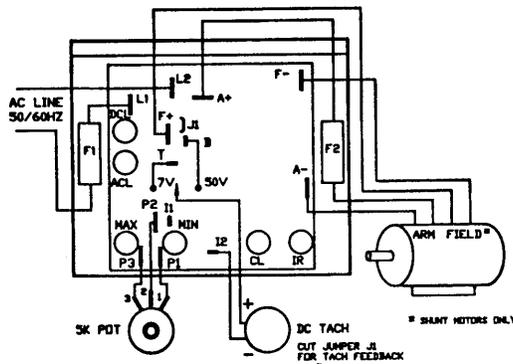


Fig. 1. Basic RAMM Connection Diagram

CAUTION: Do not bundle potentiometer connections (P1, P2, P3) and inhibit Connections (I1, I2) with AC line or motor wires.

B. VOLTAGE FOLLOWING. All models can be controlled with an isolated analog reference voltage (0-6VDC) in lieu of the main speed potentiometer. The voltage is connected to P2 (+) and F-. The control output voltage will linearly follow the input voltage. The source impedance of the input should be 10k ohms or less. The Min trimpot can be used to provide an offset speed. If an offset is not required adjust the Min to 0+ or 0- speed as desired. The Max trimpot is rendered inoperative in the voltage following mode. Use auxiliary trimpot to limit the control range. If the input signal is not isolated, or is a current signal (4-20ma), the RA-SI240D Signal Isolator must be used. It will allow direct connection to process controllers and microprocessors.

Caution: 1. The voltage feeding P2 and F- must be isolated from the AC line. Do not ground P2 or F- to set up a zero ground reference.
2. Do not bundle signal wires to P2 and F- with AC line motor connections. If signal wires are over 18", use shielded cables.

C. FUSING. The RAMM has provision for a built in AC line fuse and armature fuse. The AC line fuse protects the control against catastrophic failure. If the fuse blows, the control is mis-wired, the motor is shorted or grounded, or the RAMM control is defective. The armature fuse provides overload protection for the motor and control. Choose the proper size armature fuse by multiplying the maximum DC motor amps by 1.7. On domestic 240 Volt AC lines, separate branch circuit protection for each line must be used. All fuses should be normal blow ceramic 3AG or ABC or equivalent.

1. AC Line Fuse is chosen according to the maximum rating of the control:
 - 12 AMP fuse for all motors up to 3/4 HP-90V and 1 1/2 HP-180VDC.
 - 25 AMP fuse for all motors 1 and 1 1/2 HP-90V and 2 and 3 HP-180VDC.

(Use Buss ABC, Littlefuse 326 ceramic fuse or equivalent.)

2. Armature Fuse can be chosen in accordance with the fuse chart. Note: The armature fuse is calculated based on the approximate full load DC current rating of the motor times a form factor of 1.5. If motor has characteristics not consistent with these approximations, a different fuse value may have to be used. Fuses are available from your distributor.

TABLE 4. ARMATURE FUSE CHART

90VDC MOTOR	180VDC MOTOR	APPROX. DC MOTOR CURRENT (AMPS)	FUSE RATING (AC AMPS)
HORSEPOWER			
1/4	1/2	2.5	4
1/2	1	5.0	8
3/4	1 1/2	7.5	12*
1	2	10.0	15
1 1/2	3	15.0	25*
*Also used as AC line Fuse.			

ADJUSTMENTS AND CONTROL FUNCTIONS


WARNING: If adjustments are made under power, insulated adjustment tools must be used and eye protection must be worn.

The **RAMM** has been factory adjusted to provide 0-full speed using the speed control knob. Minimum and Maximum speed trimpots are provided to change the speed from other than 0-full speed. The Acceleration (ACCEL) trimpot is provided to allow for a smooth start over an adjustable time period each time the AC power is applied or the speed pot is rotated. The DECEL trimpot controls the amount of ramp-down when the speed pot is adjusted to a lower speed. The Current Limit (CL, or torque output) adjustment is factory set to approximately 1 1/2 times the motor rating. The IR Compensation (IR) is factory adjusted to provide excellent motor regulation under normal operation.

NOTE: In order for the IR comp and CL trimpot settings to be correct, the proper Plug-in Horsepower Resistor must be installed for the particular motor and input volt age being used. Do no attempt to change the settings of the trimpots unless absolutely necessary since they are factory adjusted to near optimum settings.

The following procedure, presented in order of adjustment sequence, should be used when readjusting all trimpot functions.

Fig 2. ACCEL/DECEL TRIMPOT ADJUSTMENT

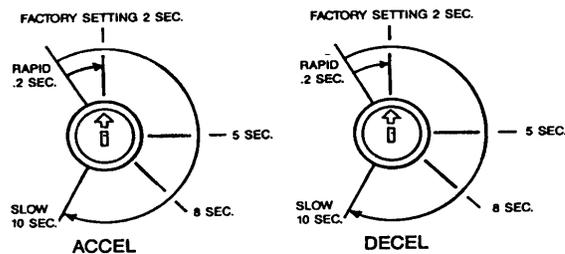

A. Acceleration Start. The ACCEL is factory set at approximately .2 seconds. To readjust to different times, set the knob to the desired position as indicated in Fig 2.

B. Deceleration. The DECEL is factory set to provide a ramp-down time of .2 seconds. To change the ramp-down time, adjust the DECEL trimpot as indicated in Fig 2.

C. Minimum Speed Adjustment. If a higher than zero minimum speed is desired, readjust the minimum speed by turning the speed control knob to zero setting (full CCW position). Then adjust the Min. Speed trimpot to the desired setting.

NOTE: The min. speed adjustment will affect the max. speed setting. Therefore, it is necessary to readjust the max. speed after the min. speed is adjusted.

D. Maximum Speed Adjustment. Turn Speed Control Knob to full speed (maximum CW position). Adjust max. speed trimpot to new desired setting.

NOTE: Do not attempt to adjust the max. speed above the rated motor RPM since unstable motor operation may occur. For moderate changes in the max. speed, there will be a slight effect on the min. speed setting.

E. Current Limit (CL/Torque Adjustment). CL circuitry is provided to protect the motor and control against overloads. The CL also limits the inrush current to safe level during startup. The CL is factory set to approximately 1.5 times the full load rating of the motor. (CL trimpot is nominally set to approximately 65% of full CW rotation.)

To set the CL to factory specification adjust as follows:

1. Set speed control knob at approximately 30-50% CW rotation.
Set CL trimpot to full CCW position.
2. Connect a DC ammeter in series with the armature lead.
3. Lock shaft of motor (be sure CL pot is in full CCW position).
Apply power and rotate CL pot CW slowly until DC ammeter reads 1.5 times motor rating (do not exceed 2 times motor rating, Max. CW position.)

NOTE: If only an AC ammeter is available, it can be installed in series with the AC line. Follow above instructions; however, set AC amperage at .75 times motor rating.

F. IR Compensation Adjustment. IR compensation is provided to substantially improve load regulation. If the load presented to the motor does not vary substantially, the IR adjustment may be set at a minimum level (approximately 1/4 of full setting). The control is factory adjusted to approximately 3% regulation. If superior performance is desired (less than 1% speed change of base speed from 0 to full load), then the IR comp. should be adjusted as follows.


NOTES: 1. Excessive IR comp. Will cause control to become unstable, which causes motor cogging.
2. For tach feedback applications the IR comp can be set to minimum rotation (full CCW).

1. Set IR comp. Trimpot at approximately 25% of CW rotation. Run motor unloaded at approximately 1/3 speed and record RPM.
2. Run motor with maximum load and adjust IR comp. trimpot so that the motor speed under load equals the unloaded speed per step 1.
3. Remove load and recheck unloaded RPM. If unloaded RPM has shifted, repeat procedure for more exact regulation.

The **RAMM** is now compensated to provide minimal speed change under large variations of applied load.

LIMITED WARRANTY—RAMM 125, 225, 225D

For a period of one (1) year from date of original purchase Rapid-Air Corporation will repair or replace without charge devices which our examination proves to be defective in material or workmanship. This warranty is valid if the unit has not been tampered with by unauthorized persons, misused, abused or improperly installed and has been used in accordance with the instructions and/or ratings supplied. The foregoing is in lieu of any other warranty or guarantee expressed or implied, and we are not responsible for any expense (including installation and removal), inconvenience, or consequential damage, including injury to any person, caused by items of our manufacture and/or sale. Some states do not allow certain exclusions or limitations found in this warranty so that they may not apply to you. In any event, Rapid-Air Corporation's total liability, under all circumstances, shall not exceed the full purchase price of this unit.

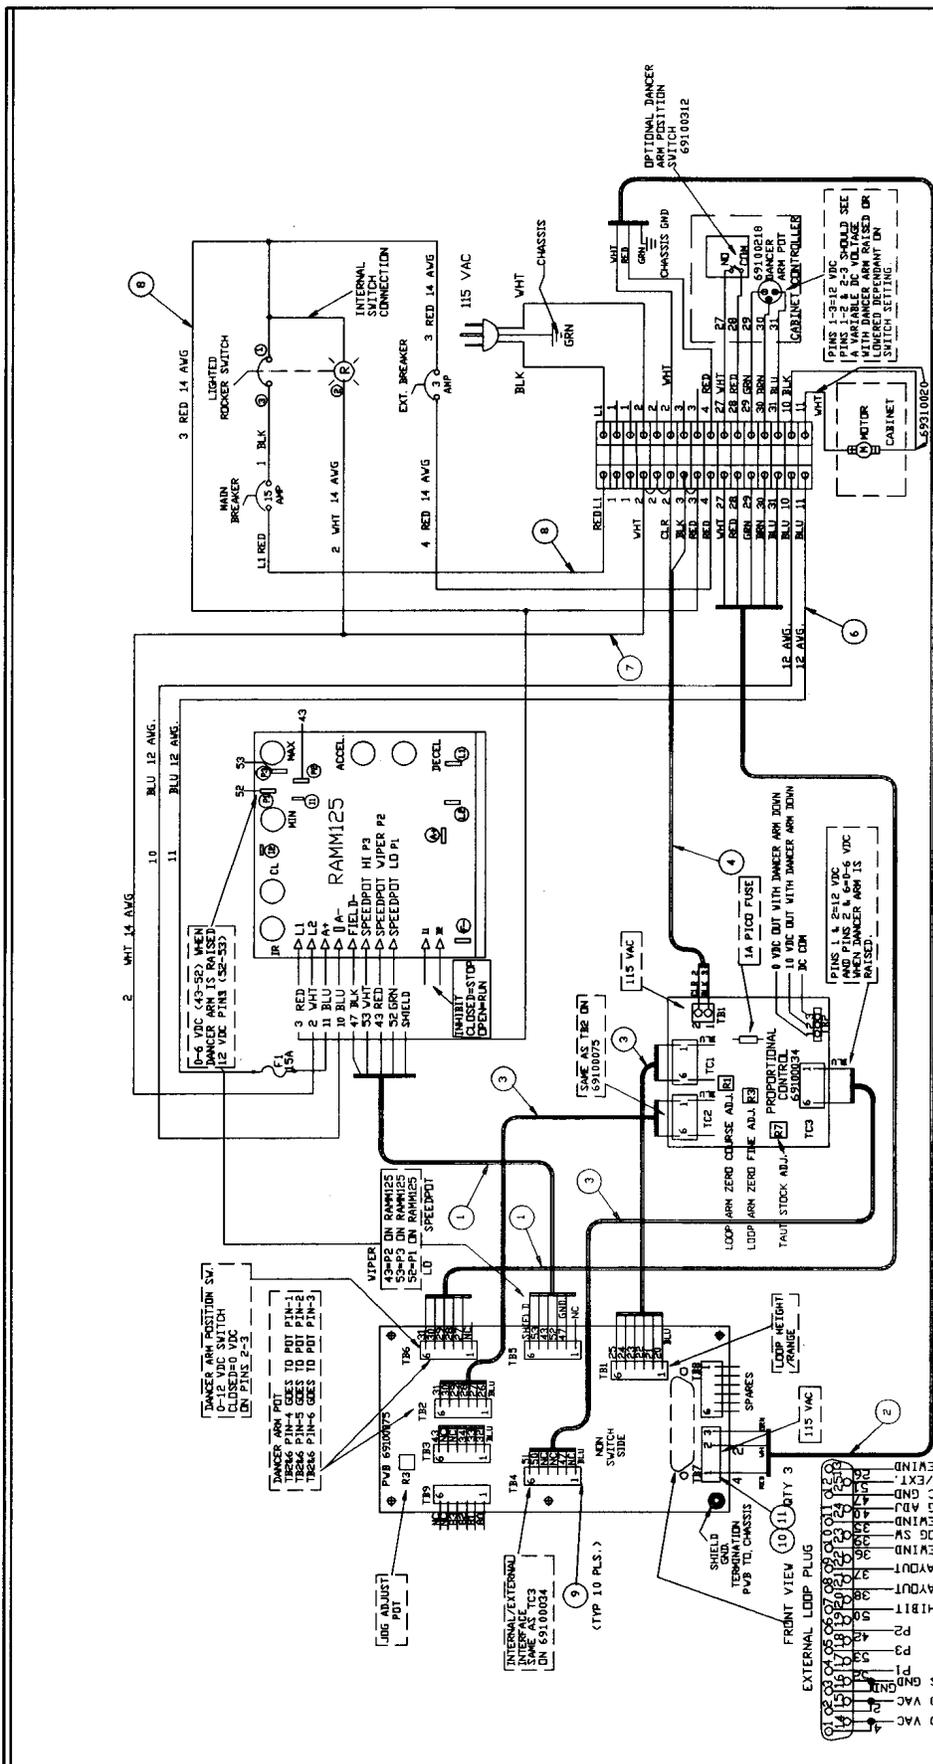


WIRE AND CABLE CHART


NO.	DESCRIPTION	WIRE NO.	WIRE SIZE	WIRE TYPE	WIRE COLOR	WIRE LENGTH
1	120 VAC	1	14	AWG	RED	10
2	120 VAC	2	14	AWG	BLK	10
3	120 VAC	3	14	AWG	GRN	10
4	120 VAC	4	14	AWG	WHT	10
5	120 VAC	5	14	AWG	BLU	10
6	120 VAC	6	14	AWG	BRN	10
7	120 VAC	7	14	AWG	YEL	10
8	120 VAC	8	14	AWG	ORN	10
9	120 VAC	9	14	AWG	GRY	10
10	120 VAC	10	14	AWG	SLV	10
11	120 VAC	11	14	AWG	MAU	10
12	120 VAC	12	14	AWG	DBL	10
13	120 VAC	13	14	AWG	WHT	10
14	120 VAC	14	14	AWG	GRN	10
15	120 VAC	15	14	AWG	BLK	10
16	120 VAC	16	14	AWG	RED	10
17	120 VAC	17	14	AWG	BLU	10
18	120 VAC	18	14	AWG	BRN	10
19	120 VAC	19	14	AWG	YEL	10
20	120 VAC	20	14	AWG	ORN	10
21	120 VAC	21	14	AWG	GRY	10
22	120 VAC	22	14	AWG	SLV	10
23	120 VAC	23	14	AWG	MAU	10
24	120 VAC	24	14	AWG	DBL	10
25	120 VAC	25	14	AWG	WHT	10
26	120 VAC	26	14	AWG	GRN	10
27	120 VAC	27	14	AWG	BLK	10
28	120 VAC	28	14	AWG	RED	10
29	120 VAC	29	14	AWG	BLU	10
30	120 VAC	30	14	AWG	BRN	10
31	120 VAC	31	14	AWG	YEL	10
32	120 VAC	32	14	AWG	ORN	10
33	120 VAC	33	14	AWG	GRY	10
34	120 VAC	34	14	AWG	SLV	10
35	120 VAC	35	14	AWG	MAU	10
36	120 VAC	36	14	AWG	DBL	10
37	120 VAC	37	14	AWG	WHT	10
38	120 VAC	38	14	AWG	GRN	10
39	120 VAC	39	14	AWG	BLK	10
40	120 VAC	40	14	AWG	RED	10
41	120 VAC	41	14	AWG	BLU	10
42	120 VAC	42	14	AWG	BRN	10
43	120 VAC	43	14	AWG	YEL	10
44	120 VAC	44	14	AWG	ORN	10
45	120 VAC	45	14	AWG	GRY	10
46	120 VAC	46	14	AWG	SLV	10
47	120 VAC	47	14	AWG	MAU	10
48	120 VAC	48	14	AWG	DBL	10
49	120 VAC	49	14	AWG	WHT	10
50	120 VAC	50	14	AWG	GRN	10
51	120 VAC	51	14	AWG	BLK	10
52	120 VAC	52	14	AWG	RED	10
53	120 VAC	53	14	AWG	BLU	10
54	120 VAC	54	14	AWG	BRN	10
55	120 VAC	55	14	AWG	YEL	10
56	120 VAC	56	14	AWG	ORN	10
57	120 VAC	57	14	AWG	GRY	10
58	120 VAC	58	14	AWG	SLV	10
59	120 VAC	59	14	AWG	MAU	10
60	120 VAC	60	14	AWG	DBL	10
61	120 VAC	61	14	AWG	WHT	10
62	120 VAC	62	14	AWG	GRN	10
63	120 VAC	63	14	AWG	BLK	10
64	120 VAC	64	14	AWG	RED	10
65	120 VAC	65	14	AWG	BLU	10
66	120 VAC	66	14	AWG	BRN	10
67	120 VAC	67	14	AWG	YEL	10
68	120 VAC	68	14	AWG	ORN	10
69	120 VAC	69	14	AWG	GRY	10
70	120 VAC	70	14	AWG	SLV	10
71	120 VAC	71	14	AWG	MAU	10
72	120 VAC	72	14	AWG	DBL	10
73	120 VAC	73	14	AWG	WHT	10
74	120 VAC	74	14	AWG	GRN	10
75	120 VAC	75	14	AWG	BLK	10
76	120 VAC	76	14	AWG	RED	10
77	120 VAC	77	14	AWG	BLU	10
78	120 VAC	78	14	AWG	BRN	10
79	120 VAC	79	14	AWG	YEL	10
80	120 VAC	80	14	AWG	ORN	10
81	120 VAC	81	14	AWG	GRY	10
82	120 VAC	82	14	AWG	SLV	10
83	120 VAC	83	14	AWG	MAU	10
84	120 VAC	84	14	AWG	DBL	10
85	120 VAC	85	14	AWG	WHT	10
86	120 VAC	86	14	AWG	GRN	10
87	120 VAC	87	14	AWG	BLK	10
88	120 VAC	88	14	AWG	RED	10
89	120 VAC	89	14	AWG	BLU	10
90	120 VAC	90	14	AWG	BRN	10
91	120 VAC	91	14	AWG	YEL	10
92	120 VAC	92	14	AWG	ORN	10
93	120 VAC	93	14	AWG	GRY	10
94	120 VAC	94	14	AWG	SLV	10
95	120 VAC	95	14	AWG	MAU	10
96	120 VAC	96	14	AWG	DBL	10
97	120 VAC	97	14	AWG	WHT	10
98	120 VAC	98	14	AWG	GRN	10
99	120 VAC	99	14	AWG	BLK	10
100	120 VAC	100	14	AWG	RED	10


RAPID-AIR CORPORATION
 WIRING DIAGRAM FOR STD
 SPEED STRAIGHTENERS (1-HP)


DATE	11-11-97
BY	ECN4312 GSM
CHECKED BY	10/28/97
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG. NO.	
REV.	
DATE	
BY	
CHECKED BY	
APPROVED BY	
REV.	
DESCRIPTION	
FIG	

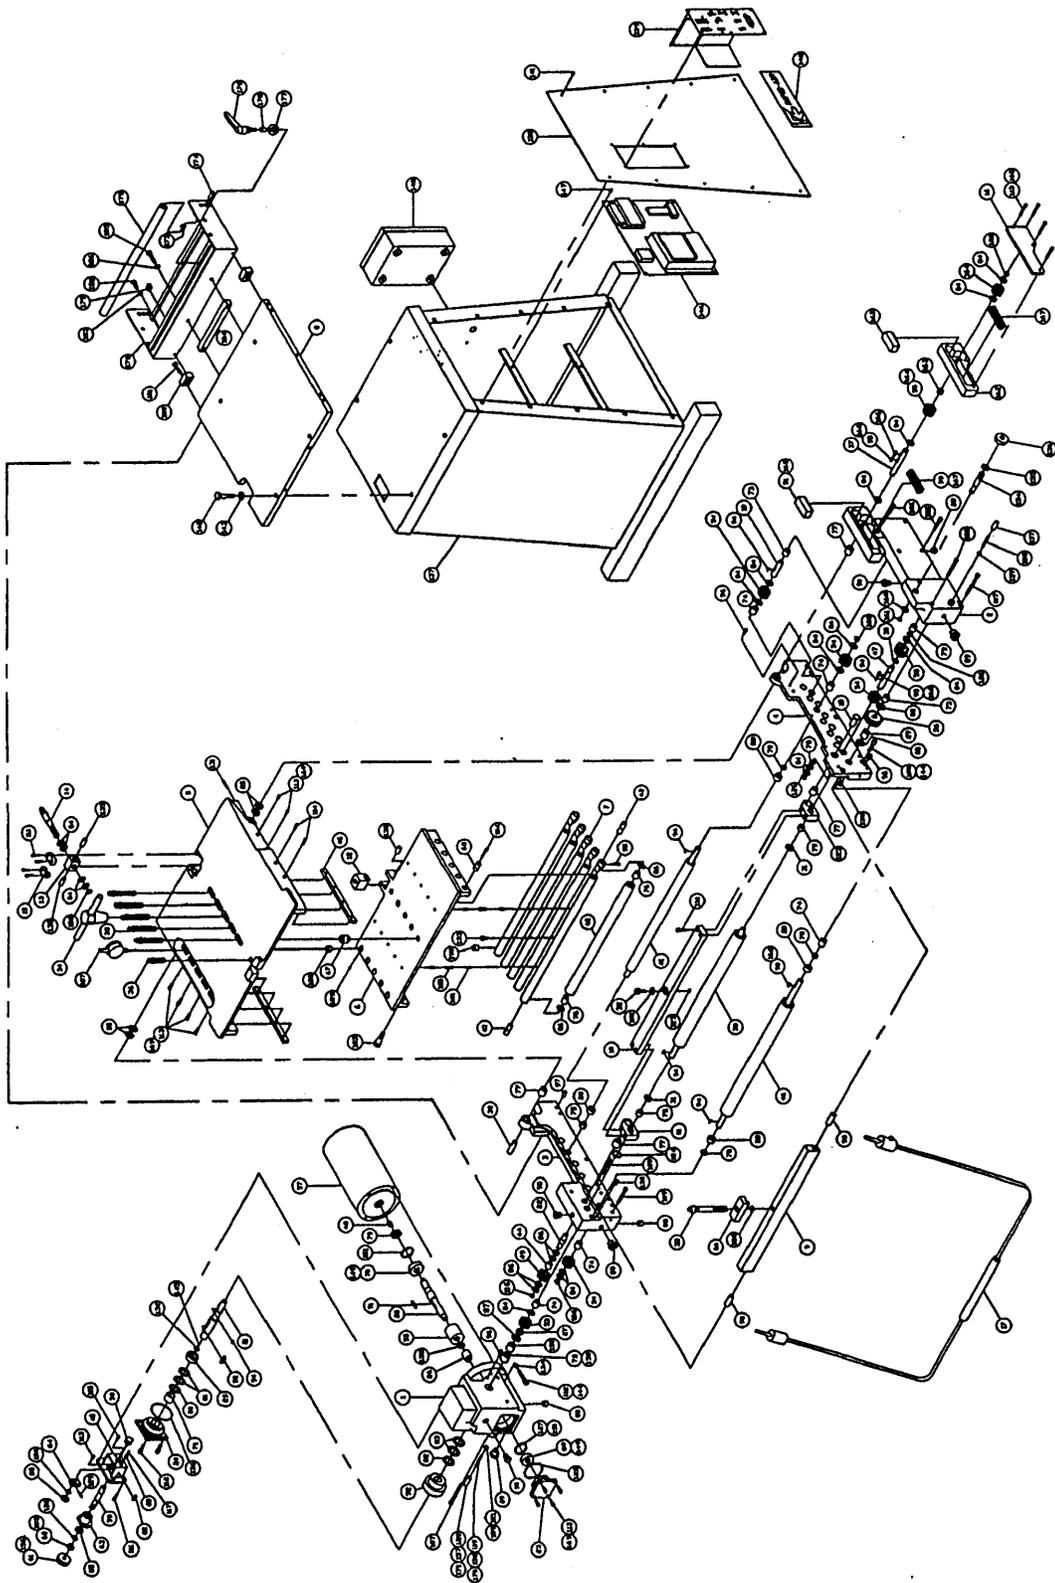


ITEM	DESCRIPTION	QTY	PART NUMBER									
96	DOVEL	4	62331075	62331075	62331075	62331075	62331075	62331075	62331075	62331075	62331075	62331075
97	DOVEL	4	62337075	62337075	62337075	62337075	62337075	62337075	62337075	62337075	62337075	62337075
98	DOVEL	2	62263150	62263150	62263150	62263150	62263150	62263150	62263150	62263150	62263150	62263150
99	SPRING	1	37500029	37500029	37500029	37500029	37500029	37500029	37500029	37500029	37500029	37500029
100	SPRING	10	37500129	37500129	37500129	37500129	37500129	37500129	37500129	37500129	37500129	37500129
101	ANCHOR	20	36100075	36100075	36100075	36100075	36100075	36100075	36100075	36100075	36100075	36100075
102	WASHER	8	37500027	37500027	37500027	37500027	37500027	37500027	37500027	37500027	37500027	37500027
103	SHOULDER SCREW	5	66162075	66162075	66162075	66162075	66162075	66162075	66162075	66162075	66162075	66162075
104	SHCS	5	65912125	65912125	65912125	65912125	65912125	65912125	65912125	65912125	65912125	65912125
105	SHCS	4	65931175	65931175	65931175	65931175	65931175	65931175	65931175	65931175	65931175	65931175
106	SHCS	1	65931150	65931150	65931150	65931150	65931150	65931150	65931150	65931150	65931150	65931150
107	SHCS	3	65931300	65931300	65931300	65931300	65931300	65931300	65931300	65931300	65931300	65931300
108	SHCS	6	65936150	65936150	65936150	65936150	65936150	65936150	65936150	65936150	65936150	65936150
109	SHCS	2	65931200	65931200	65931200	65931200	65931200	65931200	65931200	65931200	65931200	65931200
110	SHCS	4	65931100	65931100	65931100	65931100	65931100	65931100	65931100	65931100	65931100	65931100
111	SHCS	6	65920075	65920075	65920075	65920075	65920075	65920075	65920075	65920075	65920075	65920075
112	SHCS	4	65936175	65936175	65936175	65936175	65936175	65936175	65936175	65936175	65936175	65936175
113	SHCS	14	65920062	65920062	65920062	65920062	65920062	65920062	65920062	65920062	65920062	65920062
114	SHCS	2	66700062	66700062	66700062	66700062	66700062	66700062	66700062	66700062	66700062	66700062
115	SHCS	3	65912050	65912050	65912050	65912050	65912050	65912050	65912050	65912050	65912050	65912050
116	RETAINING RING	1	60910056	60910056	60910056	60910056	60910056	60910056	60910056	60910056	60910056	60910056
117	RHMS	2	66004038	66004038	66004038	66004038	66004038	66004038	66004038	66004038	66004038	66004038
118	SHCS	4	65931075	65931075	65931075	65931075	65931075	65931075	65931075	65931075	65931075	65931075
119	STUD	1	33700034	33700034	33700034	33700034	33700034	33700034	33700034	33700034	33700034	33700034
120	PIDLY TUBE	1	34400329	34400329	34400329	34400329	34400329	34400329	34400329	34400329	34400329	34400329
121	NUT	1	65112520	65112520	65112520	65112520	65112520	65112520	65112520	65112520	65112520	65112520
122	PIN	1	60108228	60108228	60108228	60108228	60108228	60108228	60108228	60108228	60108228	60108228
123	RING ROLL SIDE PLATE	1	31701712	31701712	31701712	31701712	31701712	31701712	31701712	31701712	31701712	31701712
124	RING	1	60108214	60108214	60108214	60108214	60108214	60108214	60108214	60108214	60108214	60108214
125	RETAINING RING	1	60910037	60910037	60910037	60910037	60910037	60910037	60910037	60910037	60910037	60910037
126	RETAINING RING	15	60910062	60910062	60910062	60910062	60910062	60910062	60910062	60910062	60910062	60910062
127	SNAP-RING	1	60900156	60900156	60900156	60900156	60900156	60900156	60900156	60900156	60900156	60900156
128	SHCS	2	65931275	65931275	65931275	65931275	65931275	65931275	65931275	65931275	65931275	65931275
129	ROLL PIN	1	62412100	62412100	62412100	62412100	62412100	62412100	62412100	62412100	62412100	62412100
130	ROLL PIN	2	62431075	62431075	62431075	62431075	62431075	62431075	62431075	62431075	62431075	62431075
131	ROLL PIN	2	62423125	62423125	62423125	62423125	62423125	62423125	62423125	62423125	62423125	62423125
132	DOVEL	2	62530100	62530100	62530100	62530100	62530100	62530100	62530100	62530100	62530100	62530100
133	EJECT BUTTON	5	65400062	65400062	65400062	65400062	65400062	65400062	65400062	65400062	65400062	65400062
134	DOCKWASHER	4	61320037	61320037	61320037	61320037	61320037	61320037	61320037	61320037	61320037	61320037
135	DOVEL	2	62350100	62350100	62350100	62350100	62350100	62350100	62350100	62350100	62350100	62350100
136	RING	1	60108232	60108232	60108232	60108232	60108232	60108232	60108232	60108232	60108232	60108232
137	CABINET WELDMENT	1	21400122	21400122	21400122	21400121	21400121	21400121	21400120	21400120	21400120	21400120
138	FRONT PANEL	1	31400418	31400418	31400418	31400418	31400418	31400418	31400418	31400418	31400418	31400418
139	MODULAR CONTROL ASSY	1	28900284	28900284	28900284	28900284	28900284	28900284	28900284	28900284	28900284	28900284
140	LABEL	1	39900244	39900244	39900244	39900244	39900244	39900244	39900244	39900244	39900244	39900244
141	BHMS	10	66612037	66612037	66612037	66612037	66612037	66612037	66612037	66612037	66612037	66612037
142	SHCS	4	65853150	65853150	65853150	65853150	65853150	65853150	65853150	65853150	65853150	65853150
143	DOCKWASHER	4	61300050	61300050	61300050	61300050	61300050	61300050	61300050	61300050	61300050	61300050
144	SHCS	10	65936150	65936150	65936150	65936150	65936150	65936150	65936150	65936150	65936150	65936150
145	KEY	1	36800034	36800034	36800034	36800034	36800034	36800034	36800034	36800034	36800034	36800034
146	SUB-PANEL ASSY	1	28900285	28900285	28900285	28900285	28900285	28900285	28900285	28900285	28900285	28900285
147	SHCS	4	65912050	65912050	65912050	65912050	65912050	65912050	65912050	65912050	65912050	65912050
148	DISCONNECT ASSY	1	28900291	28900291	28900291	28900291	28900291	28900291	28900291	28900291	28900291	28900291
149	BEARING	2	64600063	64600063	64600063	64600063	64600063	64600063	64600063	64600063	64600063	64600063
150	BEARING	2	64500016	64500016	64500016	64500016	64500016	64500016	64500016	64500016	64500016	64500016
151	SNAP-RING	1	60900218	60900218	60900218	60900218	60900218	60900218	60900218	60900218	60900218	60900218
152	SNAP-RING	1	60910093	60910093	60910093	60910093	60910093	60910093	60910093	60910093	60910093	60910093
153	NUT	1	65115020	65115020	65115020	65115020	65115020	65115020	65115020	65115020	65115020	65115020
154	SHAFT	1	32900630	32900630	32900630	32900630	32900630	32900630	32900630	32900630	32900630	32900630
155	SPACER	2	34700052	34700052	34700052	34700052	34700052	34700052	34700052	34700052	34700052	34700052
156	CLAMP NUT	2	36200016	36200016	36200016	36200016	36200016	36200016	36200016	36200016	36200016	36200016
157	PIDLY TUBE	2	34400329	34400329	34400329	34400329	34400329	34400329	34400329	34400329	34400329	34400329
158	STUD	2	33700034	33700034	33700034	33700034	33700034	33700034	33700034	33700034	33700034	33700034
159	NUT	2	65112520	65112520	65112520	65112520	65112520	65112520	65112520	65112520	65112520	65112520
160	WASHER	1	64520026	64520026	64520026	64520026	64520026	64520026	64520026	64520026	64520026	64520026
161	RETAINING-RING	1	60910050	60910050	60910050	60910050	60910050	60910050	60910050	60910050	60910050	60910050
162	RACK HOUSING	1	30100197	30100197	30100197	30100197	30100197	30100197	30100197	30100197	30100197	30100197
163	SPACER	1	34100254	34100254	34100254	34100254	34100254	34100254	34100254	34100254	34100254	34100254
164	GEAR	2	32600034	32600034	32600034	32600034	32600034	32600034	32600034	32600034	32600034	32600034
165	RACK	2	32600063	32600063	32600063	32600063	32600063	32600063	32600063	32600063	32600063	32600063
166	KEY	4	36800012	36800012	36800012	36800012	36800012	36800012	36800012	36800012	36800012	36800012
167	SPRING	2	37500029									

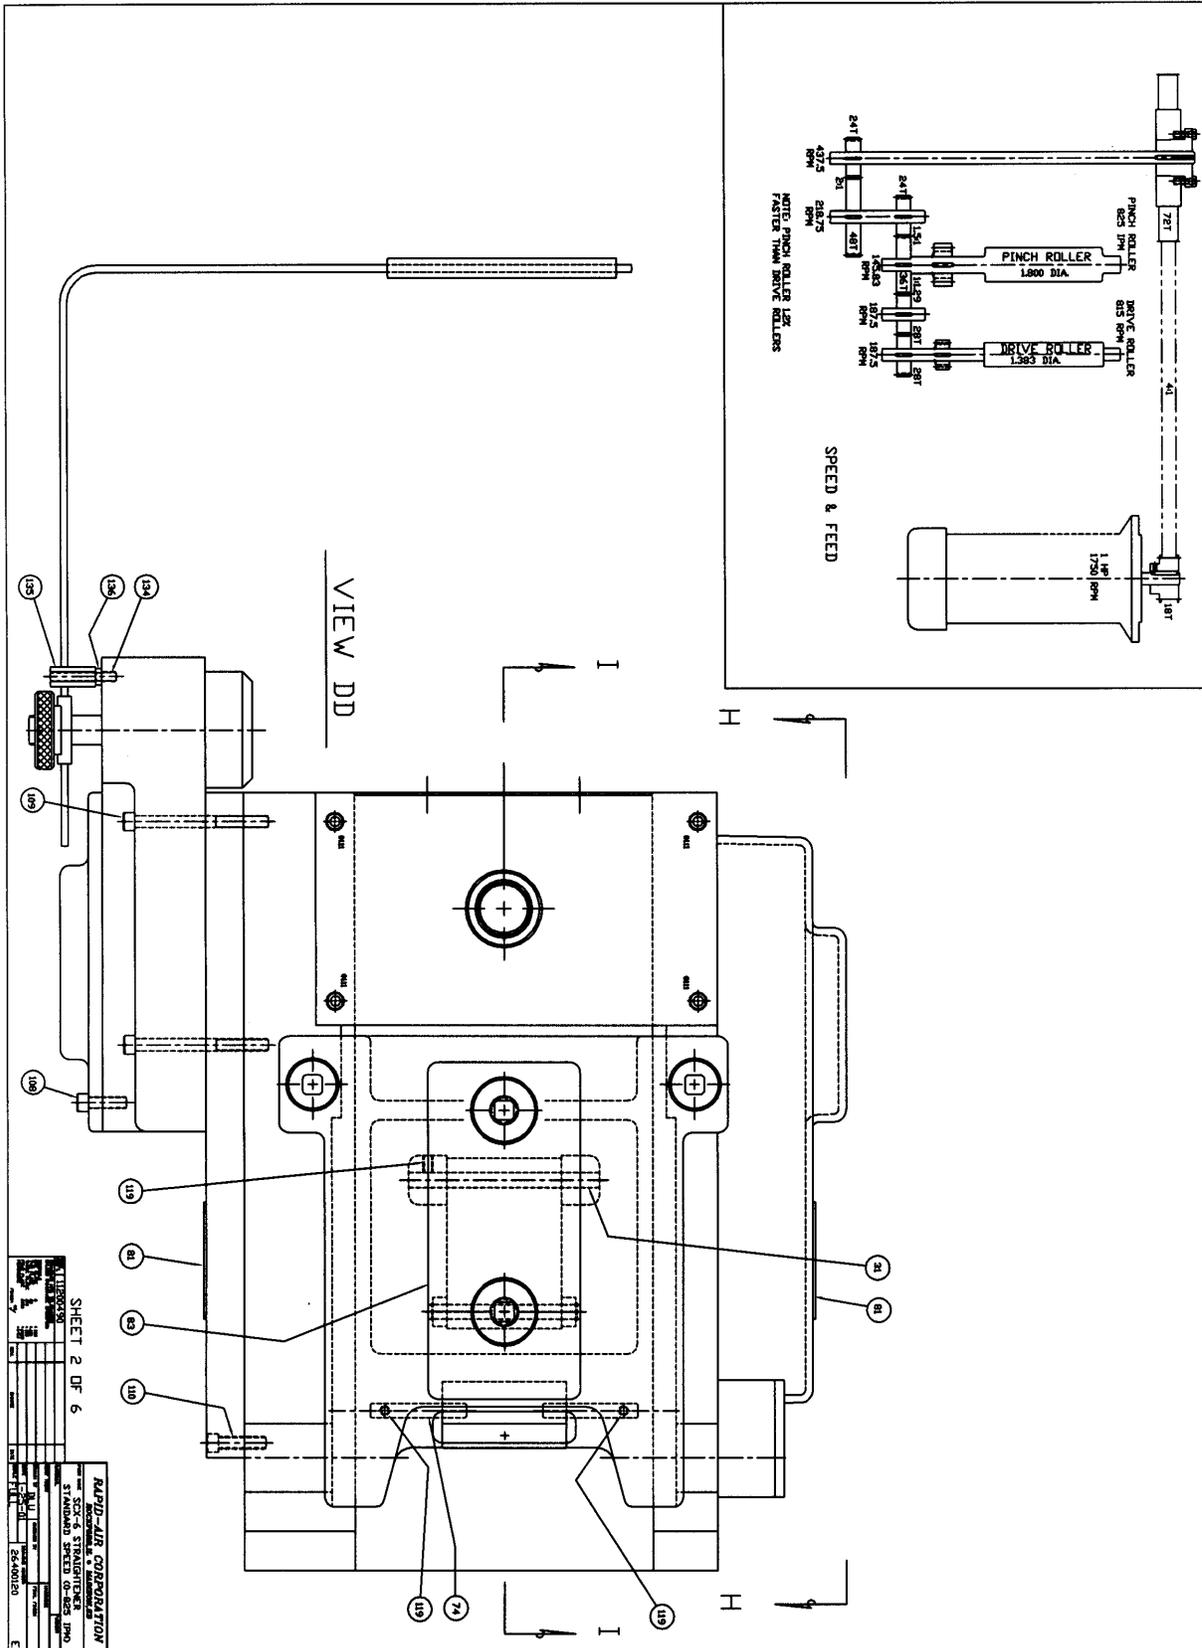

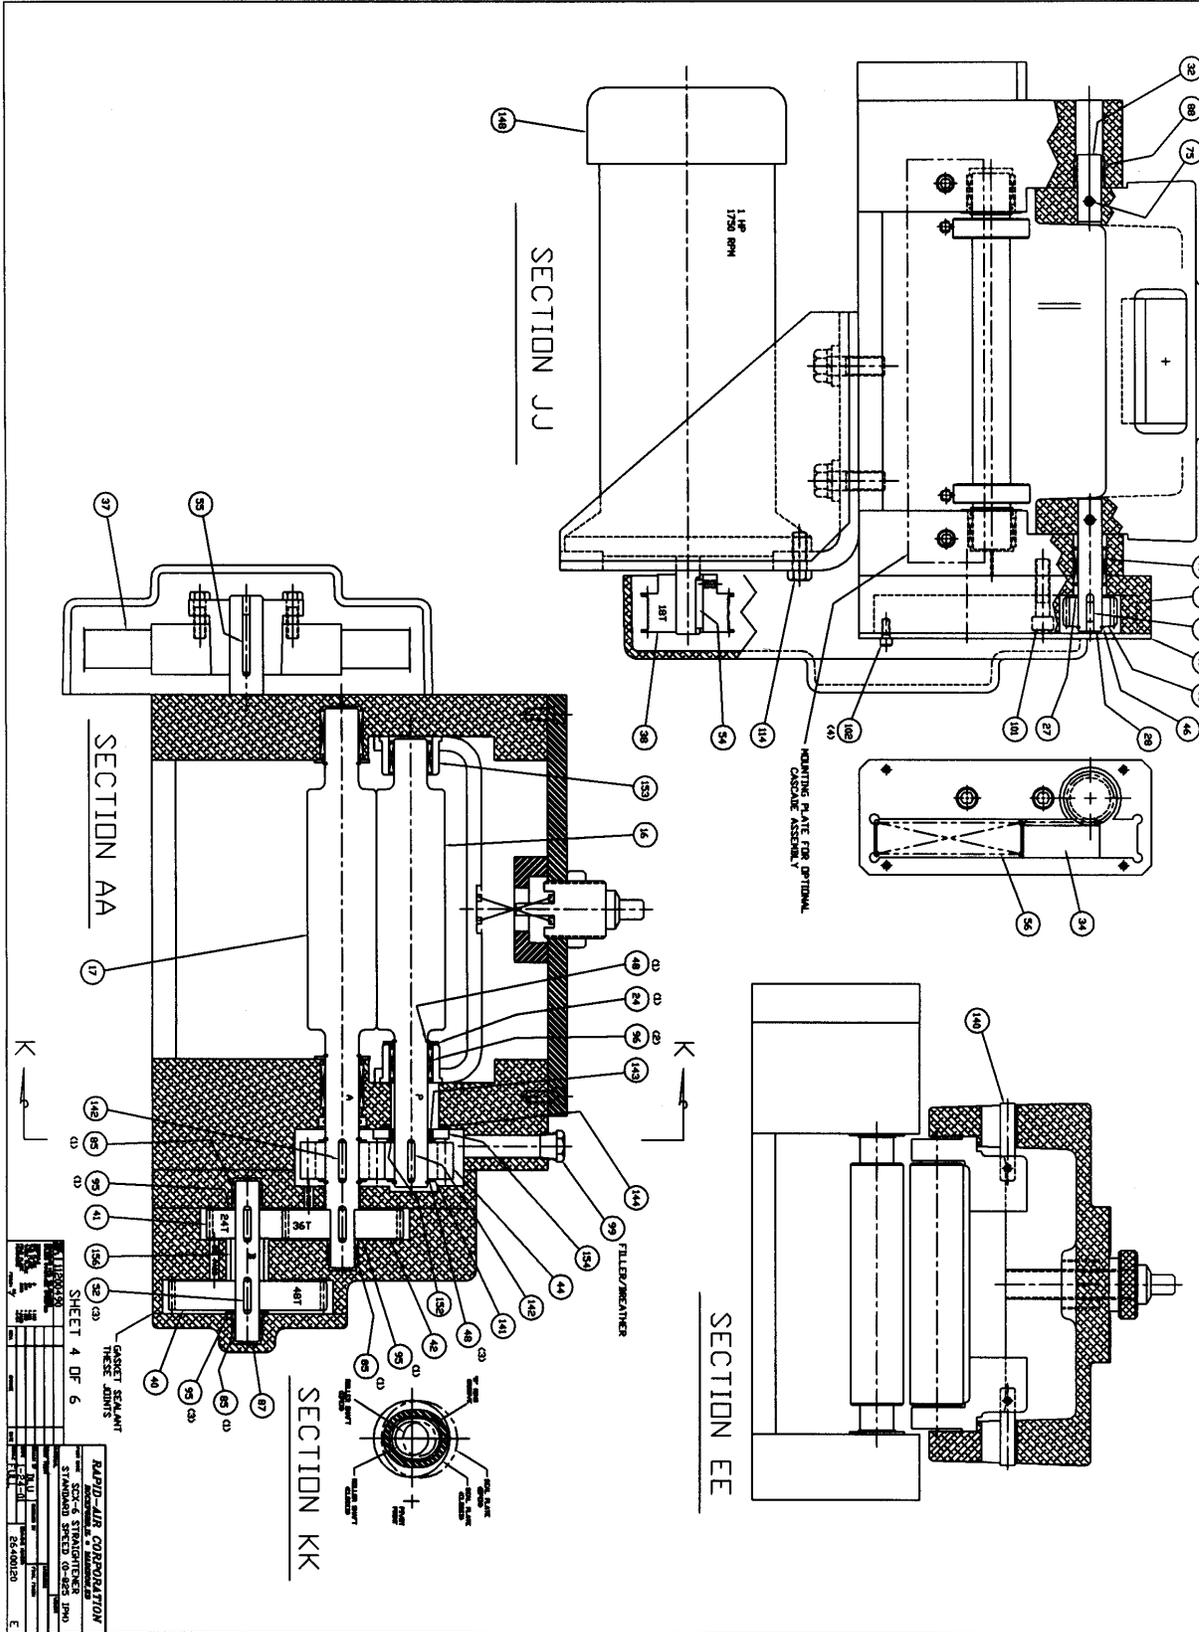

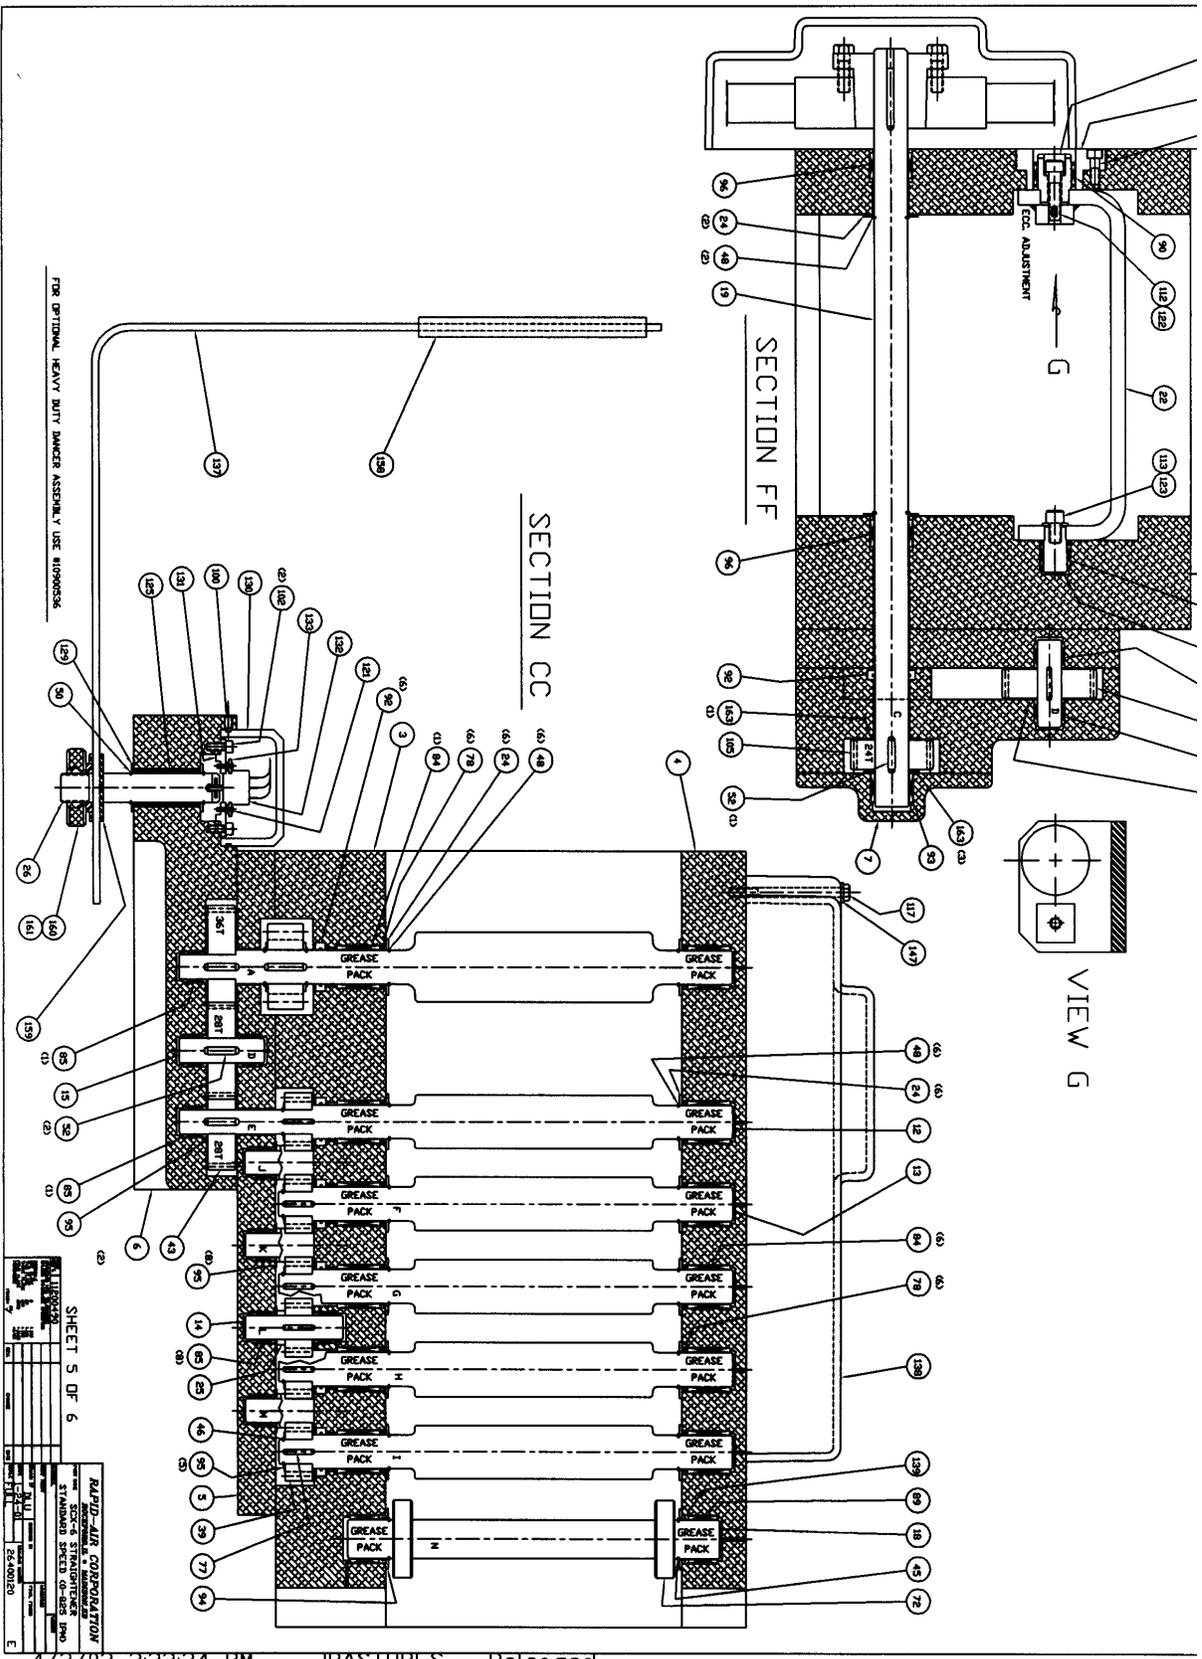

SHEET 5 OF 6
 RAYDI-ALR CORPORATION
 SC-6 STANDARD SWAGER 0-188 1960
 56400120

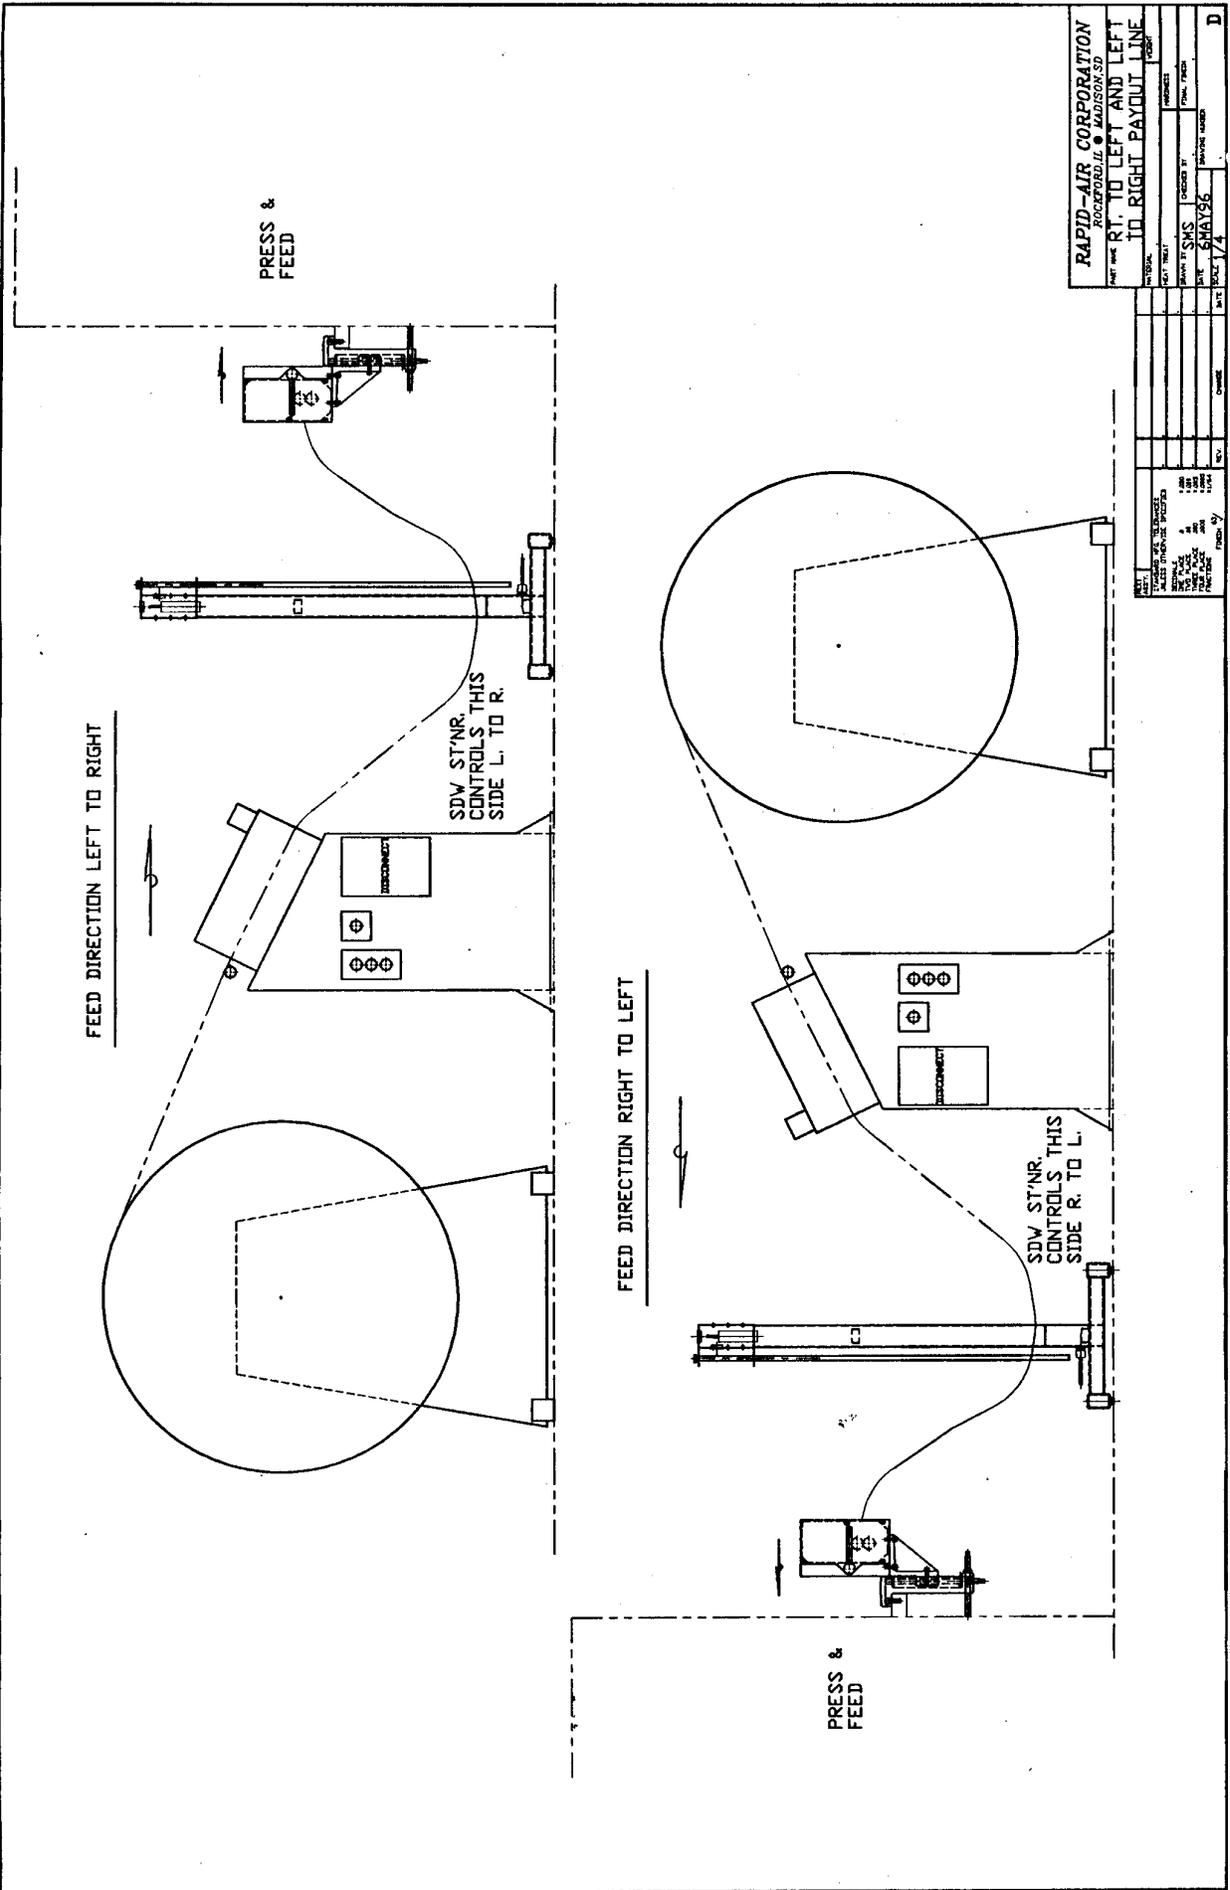

RAPID-AIR CORPORATION
 10000 W. 10th St., Suite 100
 Overland Park, MO 66211
 PHONE: (913) 641-1111
 FAX: (913) 641-1112
 WWW: www.rapid-air.com

PROJECT: **SDW ST'NR. CONTROLS THIS SIDE L. TO R.**

DATE: **5/14/96**

BY: **SMY**

SCALE: **1/4"**

NO. **1**

TOTAL SHEETS **1**

DATE: **5/14/96**

BY: **SMY**

SCALE: **1/4"**

NO. **1**

TOTAL SHEETS **1**

NO.	DATE	BY	DESCRIPTION
1	5/14/96	SMY	ISSUED FOR CONSTRUCTION

D